


# ASSEMBLY

## Bahn Desk Screen




View Digitally

# DESK-MOUNT SCREEN BASIC COMPONENTS

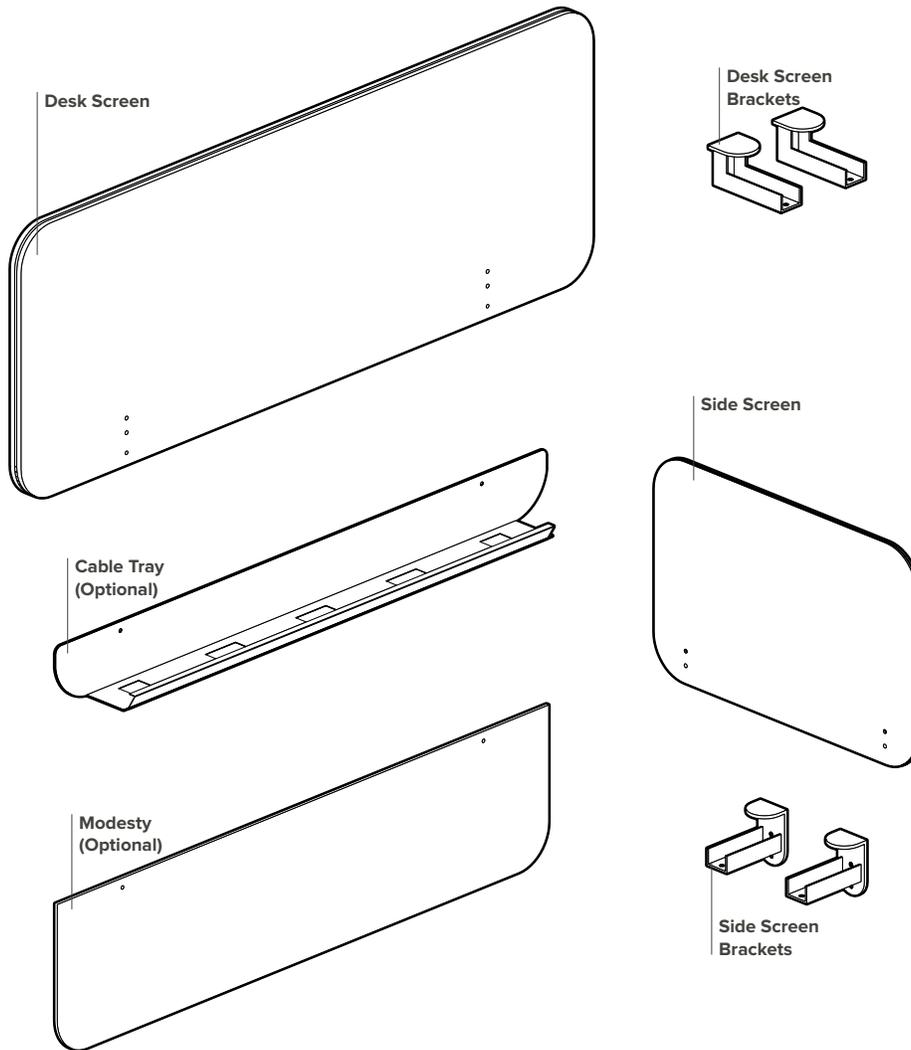


## FASTENERS

 


1/4-20x1/2" Pan Head Screw (126666)



#8x1 1/4" Square Drive Wood Screw (0000238)

 

1/4-20x1/2" Binding Post (0000292)

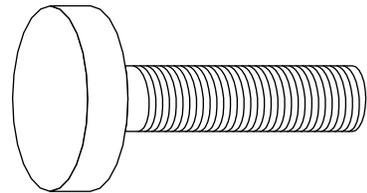


1"x1/4" Glide (0000229)

## TOOLS


 
#2 Phillips



Flathead



#2 Square



**watson**

26246 Twelve Trees Lane NW, Poulsbo, Washington 98370  
 800.426.1202 [watsonfurniture.com](http://watsonfurniture.com) [info@watsonfg.com](mailto:info@watsonfg.com)


 
1.

### Screen Brackets

Ⓐ Attach brackets to Center Screen with  $\frac{1}{4}$ -20x $\frac{1}{2}$ " screw (x4).



Ⓑ For Side Screens, use #10-32x $\frac{3}{8}$ " screws (x4).

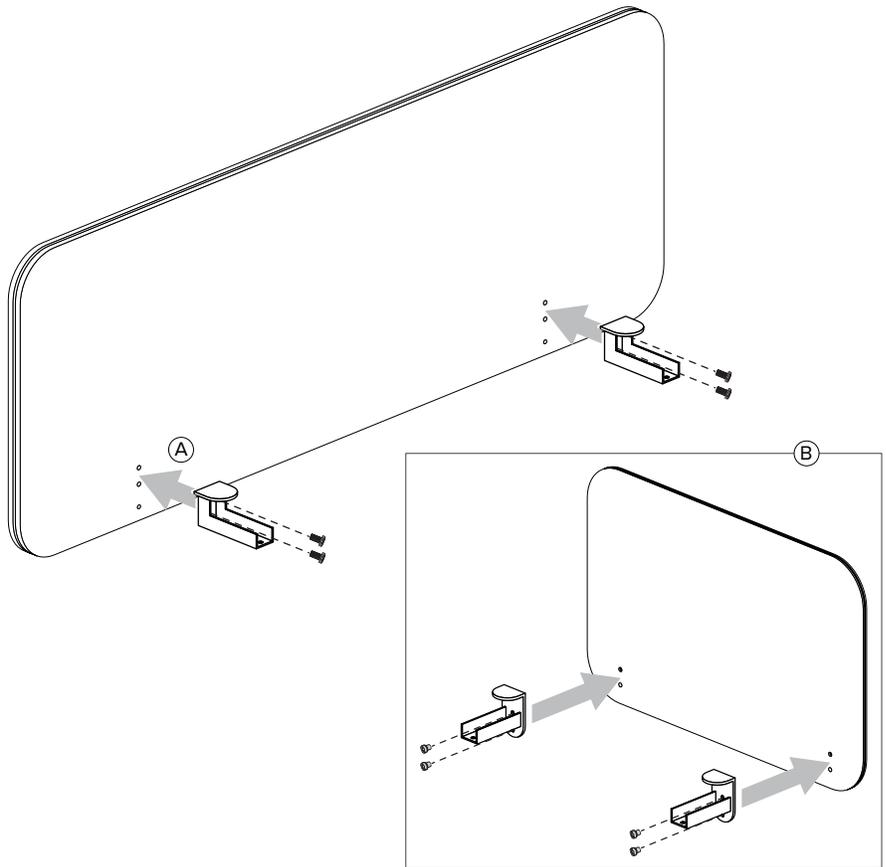



2.

### Cable Channel and Modesty

 (Optional)

Ⓐ Attach Cable Channel with  $\frac{1}{4}$ -20x $\frac{1}{2}$ " screws (x2).


Ⓑ If Modesty is selected, sandwich it between the Cable Channel and Screen then secure using  $\frac{1}{4}$ -20x $\frac{1}{2}$ " screws (x2).

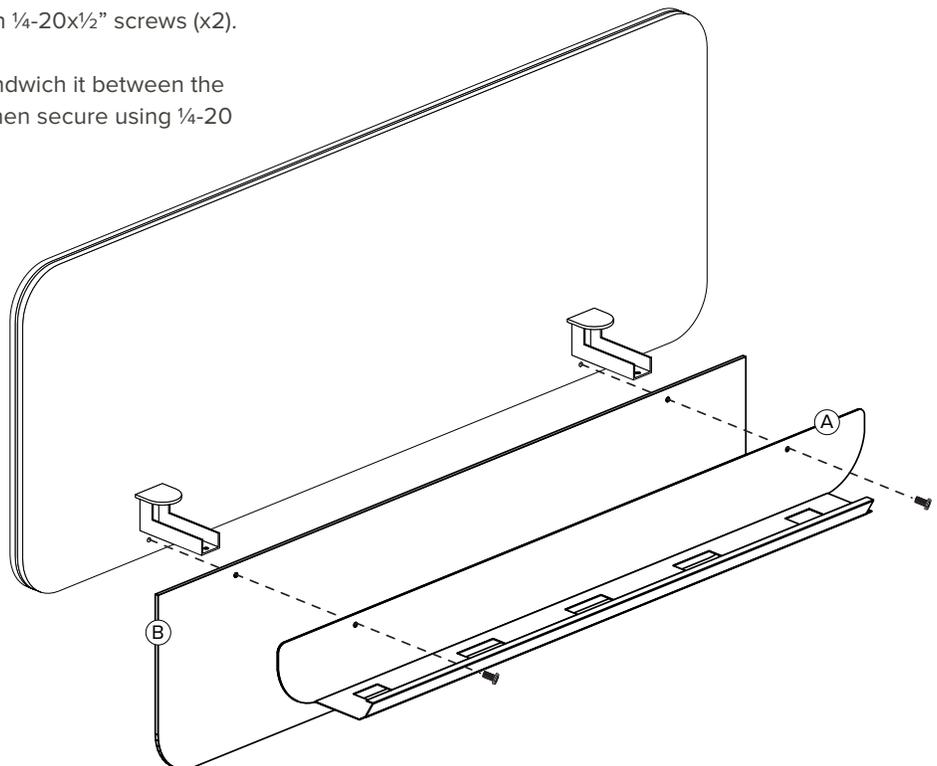



### 3.

#### Worksurface Attachment

Ⓐ For standard flat edge profiles, secure with the pressure glide.

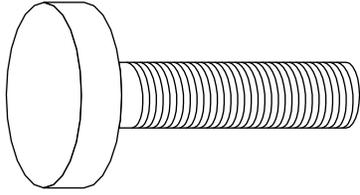

 Ⓑ For profiled edges, use the #8x1¾" wood screws (x4).

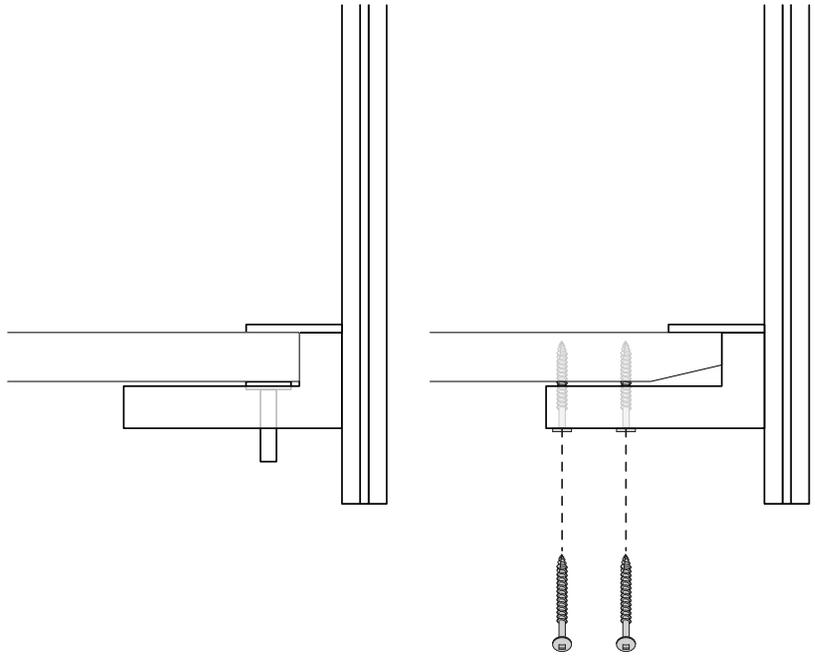

**Note** — Worksurface thickness 1-¼" maximum

**Note** — Check clearance before securing. This includes running the full range of adjustment for height-adjustable surfaces.

**Note** — The glide must be attached to the bracket after the bracket is attached to the screen.