 



# ASSEMBLY

## Tonic Table

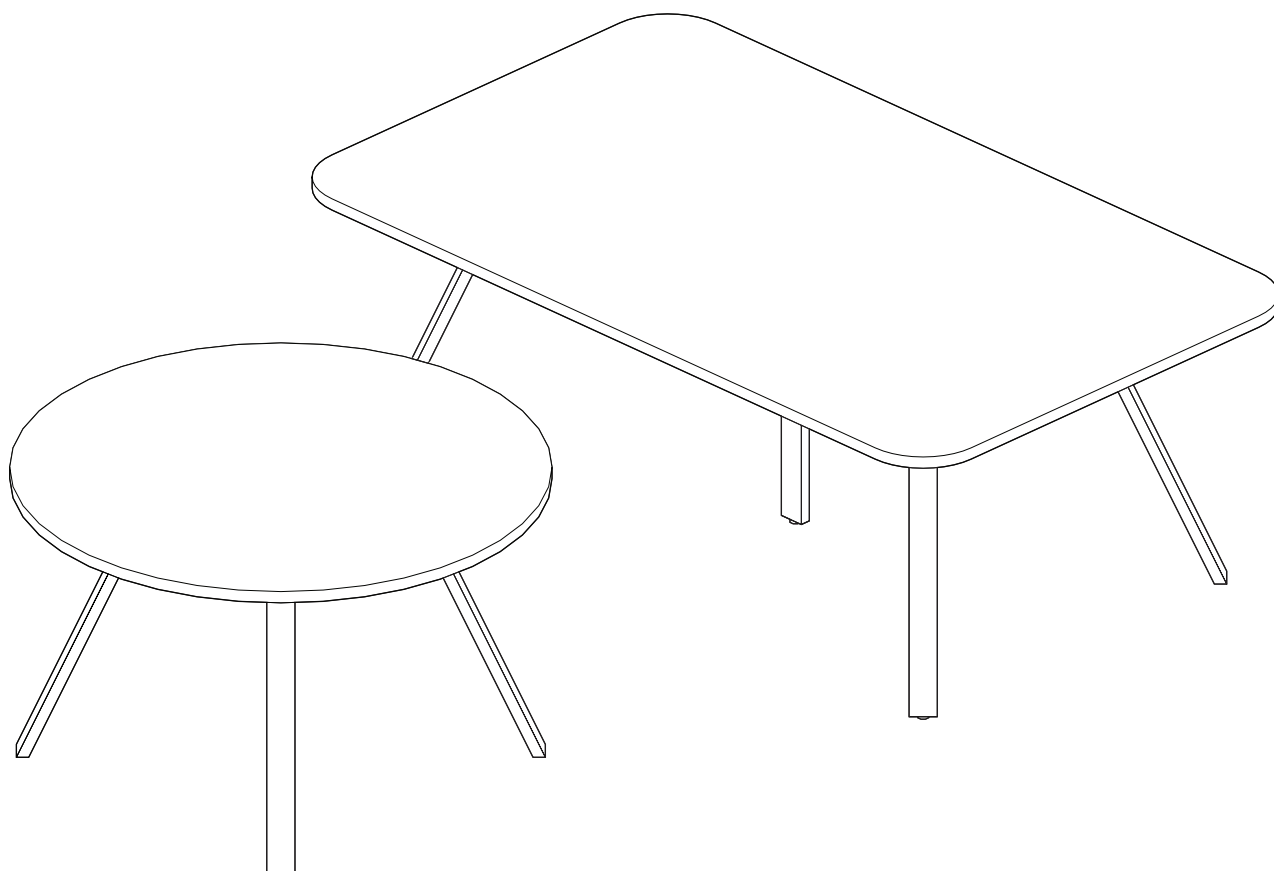


View Digitally

 
# SIMPLE TABLE COMPONENTS

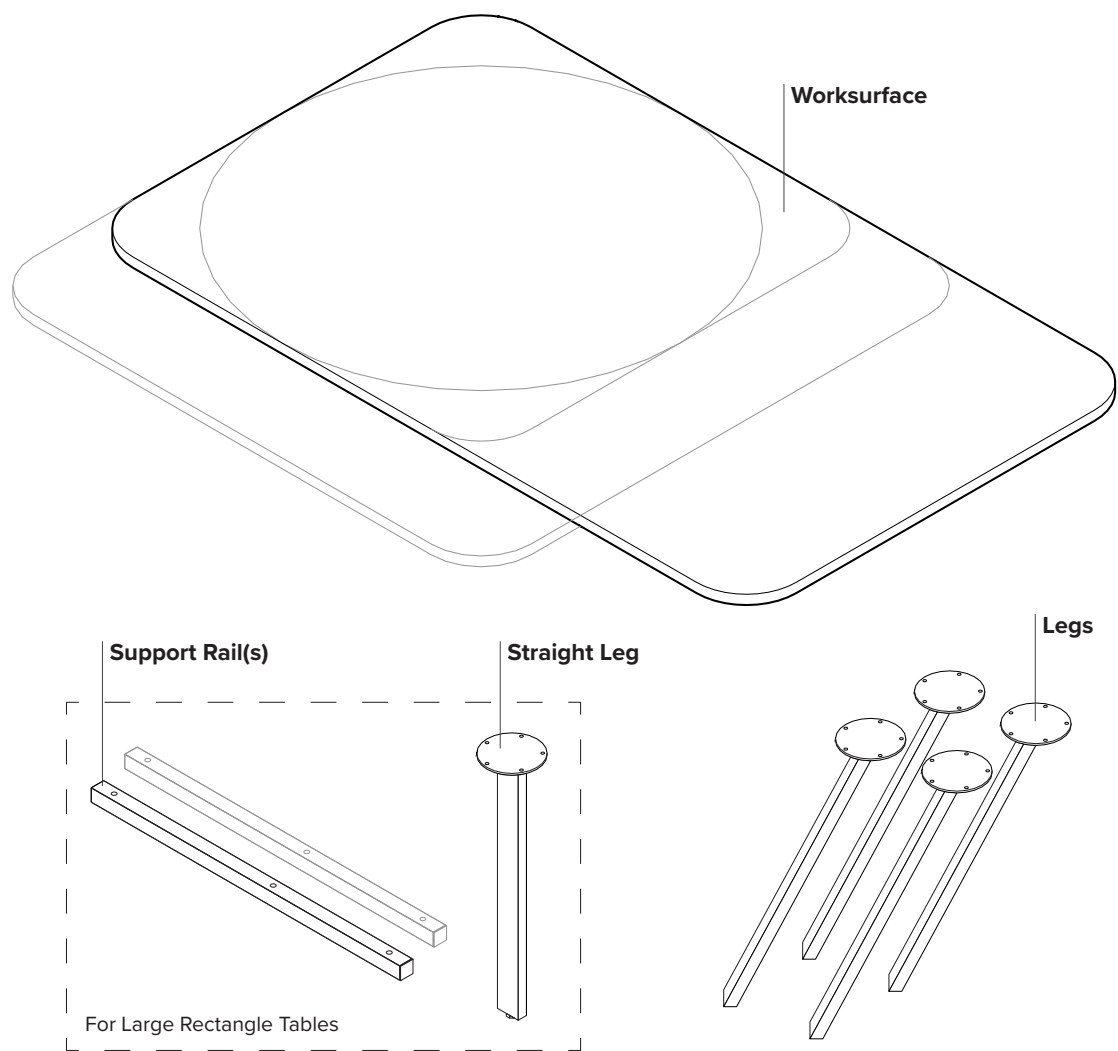

## FASTENERS

 


 1/4-20x1/2" Pan Head  
Screw, Zinc (126666)



#10x1" Truss Head, Zinc  
(122850)
 
## TOOLS




#2 Phillips



26246 Twelve Trees Lane NW, Poulsbo, Washington 98370  
800.426.1202 [watsonfurniture.com](http://watsonfurniture.com) [info@watsonfg.com](mailto:info@watsonfg.com)

## 1. Prepare Worksurface


 
- Ⓐ Assemble on a clean blanket or carpet.
- Ⓑ Lay worksurface face side down.

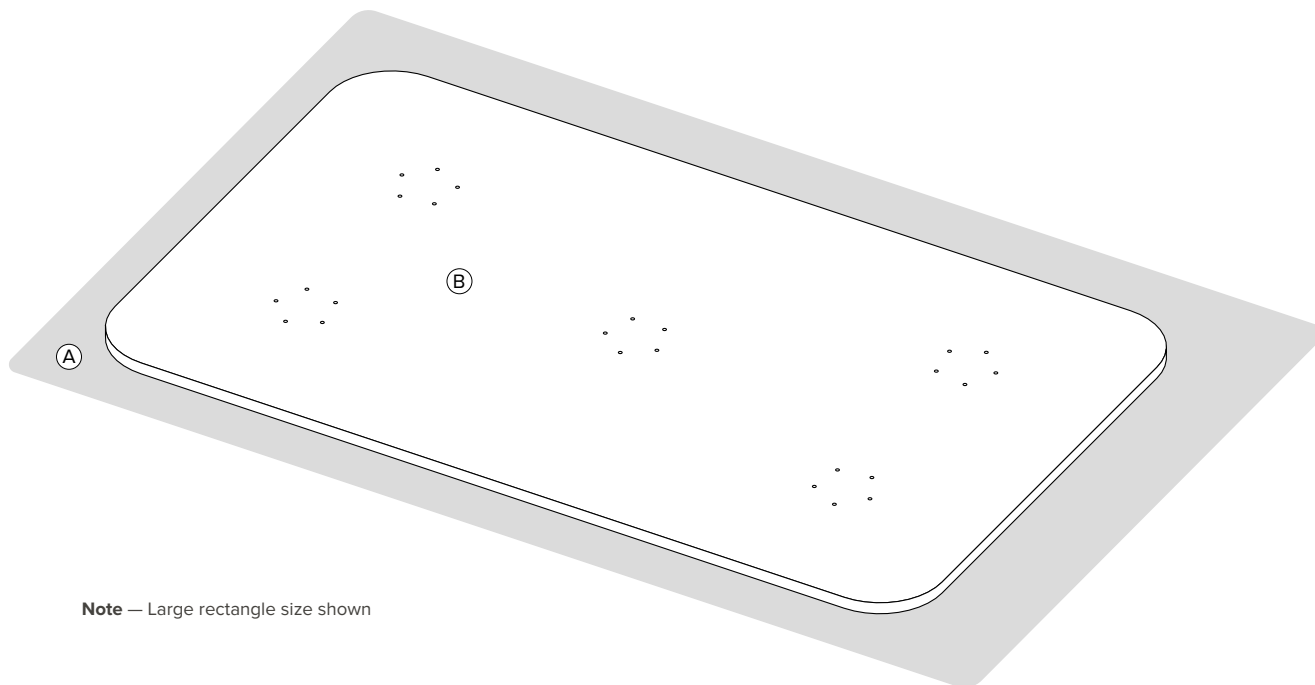

## 2. Center Leg - Rectangle Tables

(Worksurfaces of 72" or shorter do not require a center straight leg. Continue to step 3.)

Attach with 1/4-20x1/2" Pan Head Screws (x5)  
Note the leg orientation.

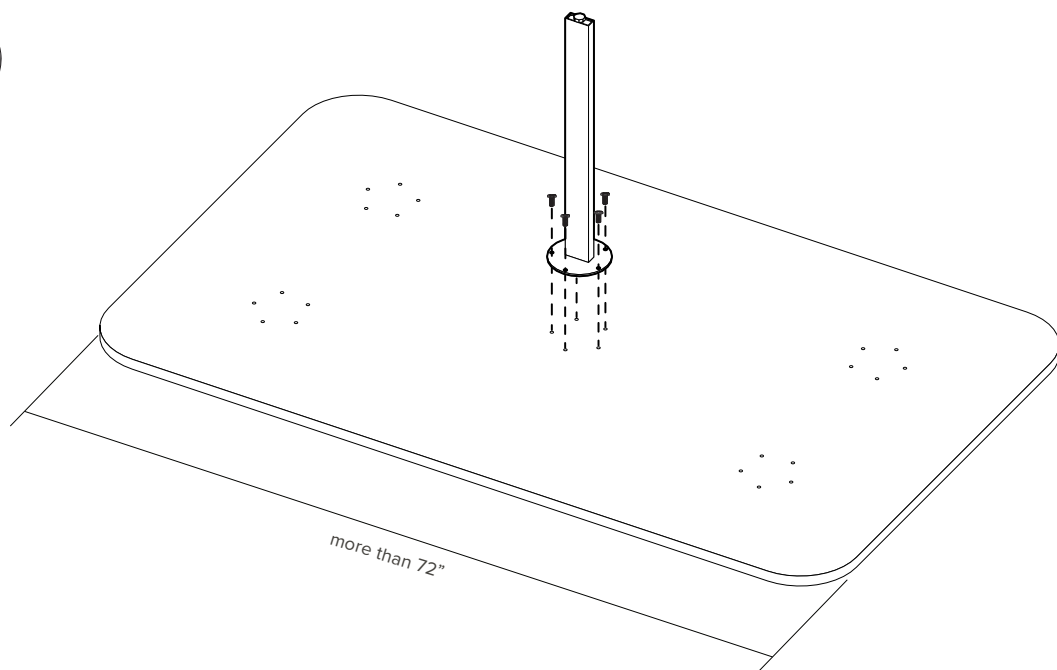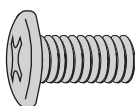


### 3. Support Tubes - Rectangle Tables

(Worksurfaces of 66" or shorter do not require support tubes. Continue to step 4)


(A) Worksurfaces 36" or narrower receive one tube, all others receive two. Space them out but keep them between the corner leg mount locations.

(B) Fasten with #10x1" Truss Head Screws (x3-4 ea)

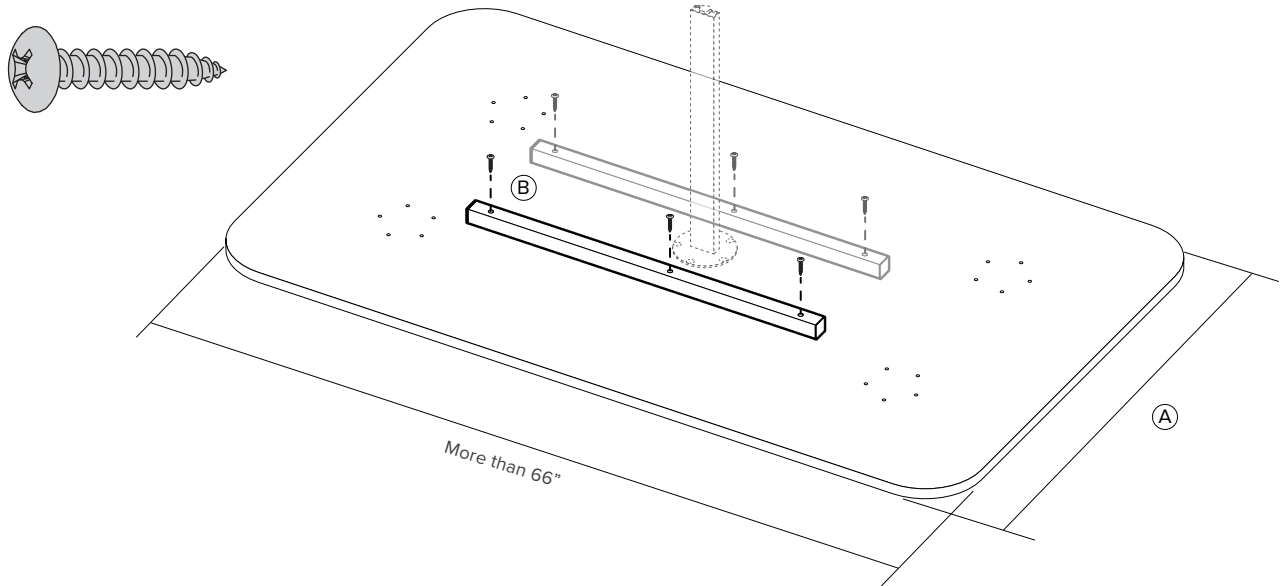

### 4. Corner Legs

Attach the four angled legs with 1/4-20x1/2" Pan Head Screws (x5 ea). Legs point out from center or towards their corner.


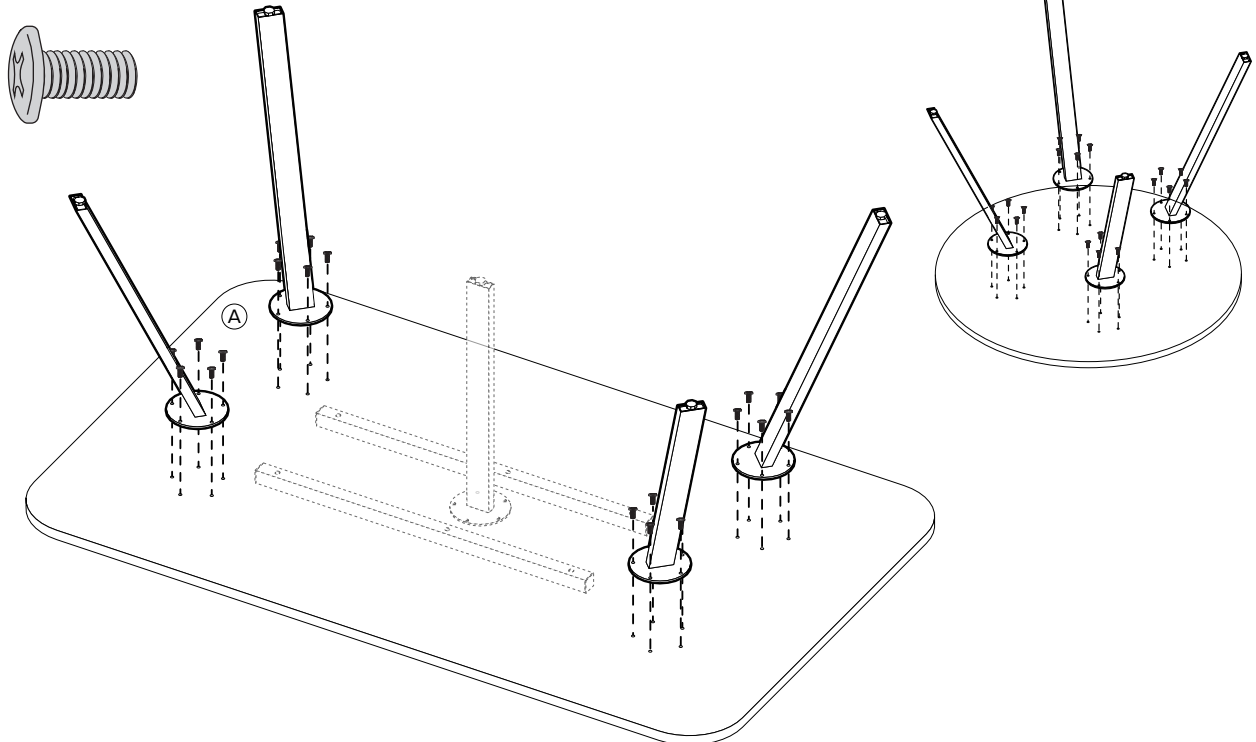


5.

### Flip and Level

Ⓐ Flip the table over onto its legs.

Ⓑ Adjust leveling glides to ensure stable performance.

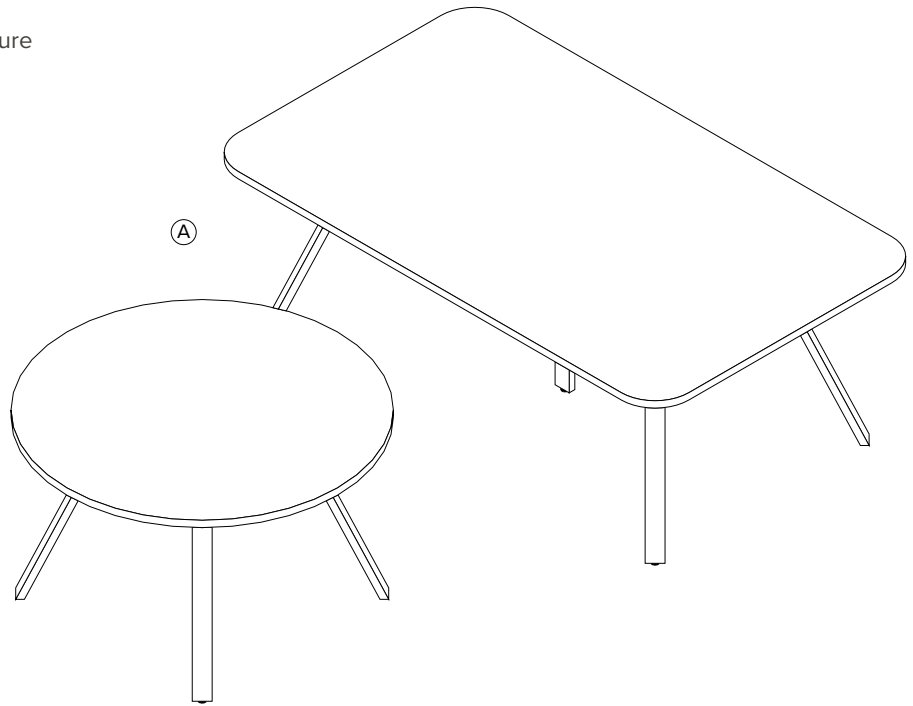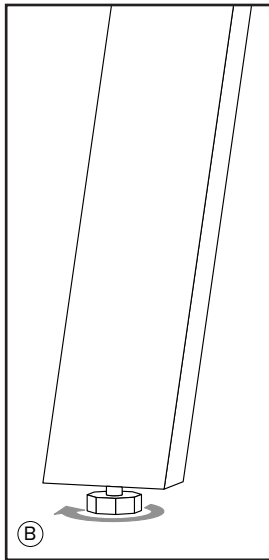

**Note** — Two people may be required to flip large tables.

**Notes**

---

---

---

---

---

---

---

---

---

---