



# ASSEMBLY

Allé Pin and Write Boards

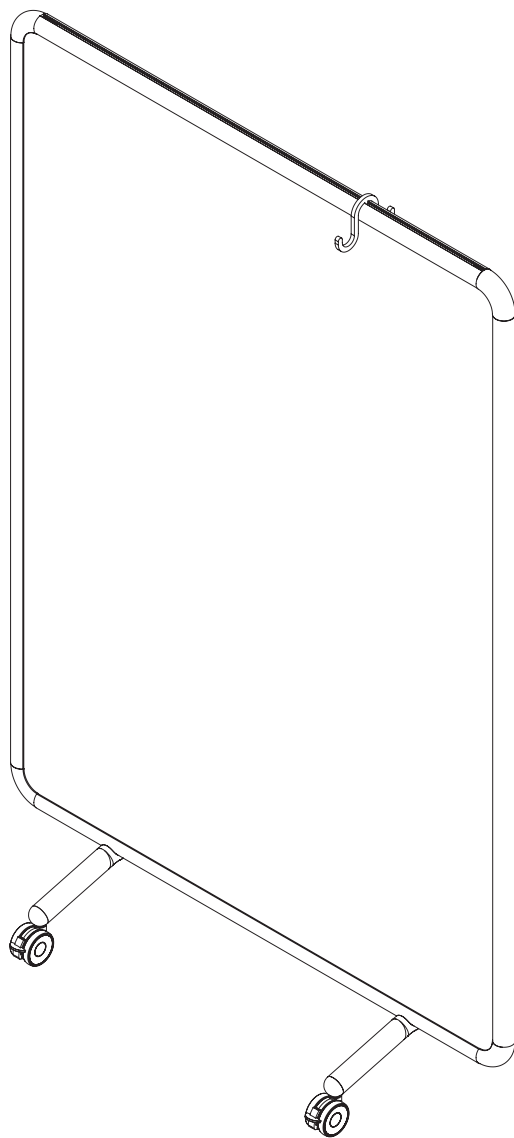


# Hardware




M8-1.25 x 25mm  
Screw, Low Head  
(0002870)


# Parts

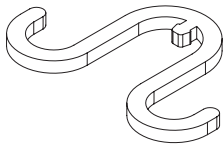

Coat Hook

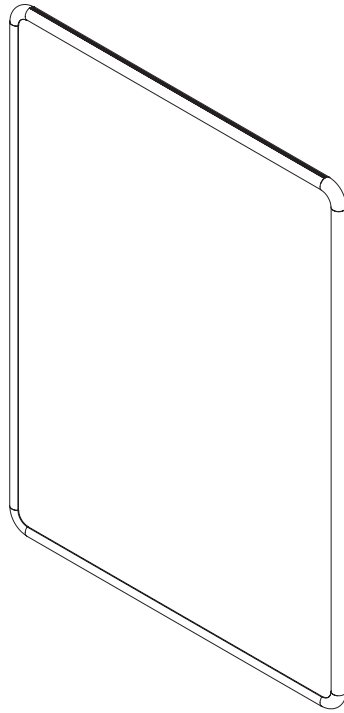


Core Board

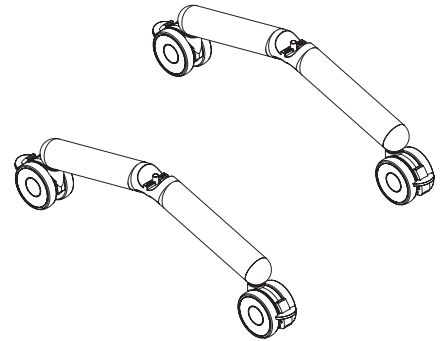



Mobile Leg Assembly

# 1. Attach Mobile Legs

Slide the T-Nuts located inside of the lower horizontal aluminum extrusion to align with each leg assembly. Place the M8 screw (PN 0002870) through the center casting of the leg assembly and loosely secure to each T-Nut. Slide the leg assemblies along the aluminum extrusion until they are situated 10 inches from the edge of the screen. Tighten the screw once this position is achieved.

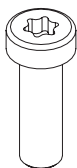

M8-1.25 x 25mm  
Screw, Low Head  
(0002870)  
(x2)

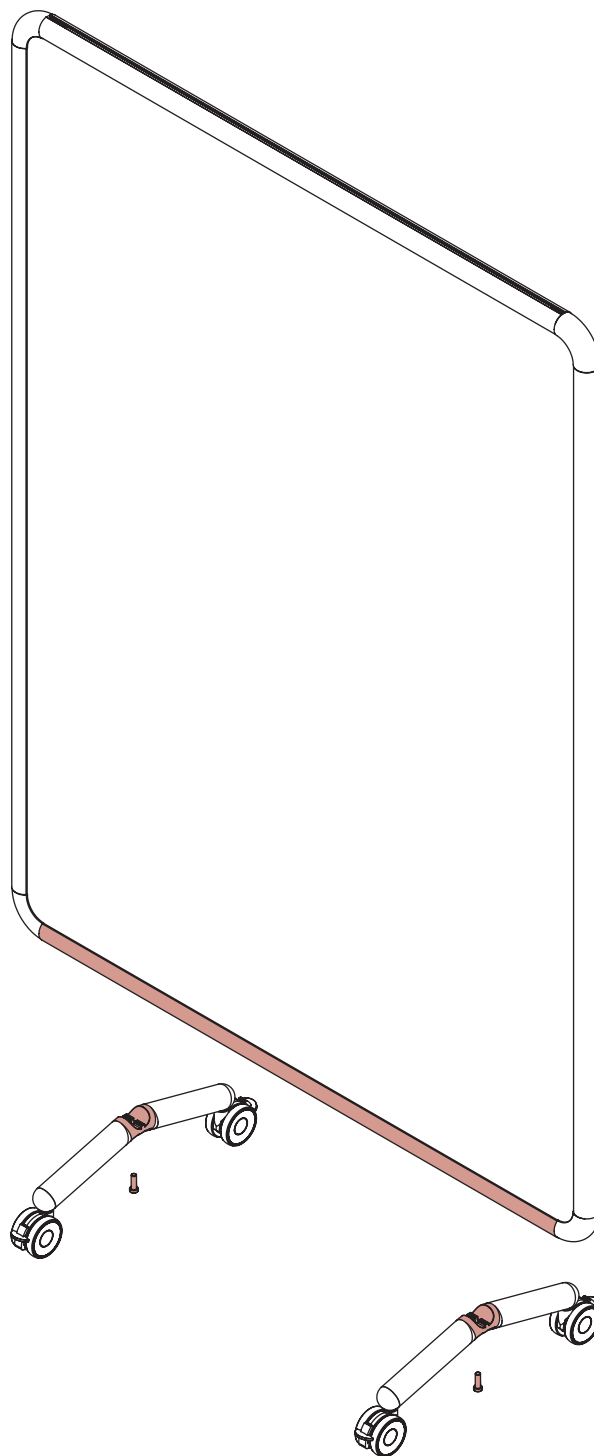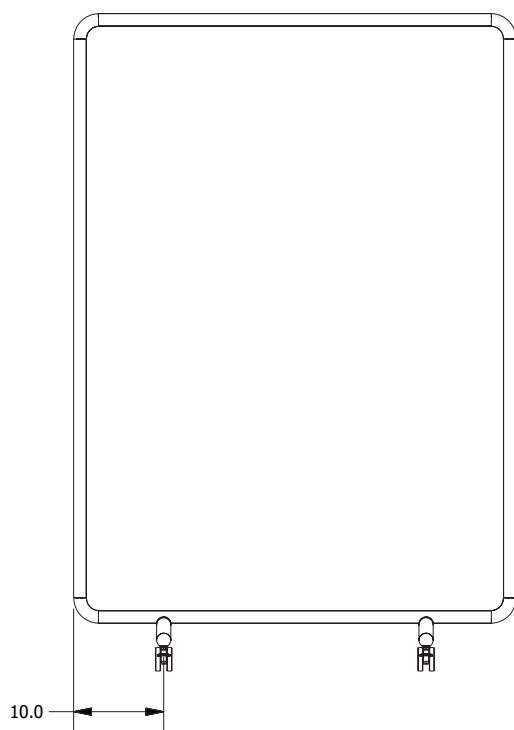

2.

### Coat Hook

Press the coat hook into the top extrusion channel of the mobile board.

