
ASSEMBLY


Bahn Side Tower

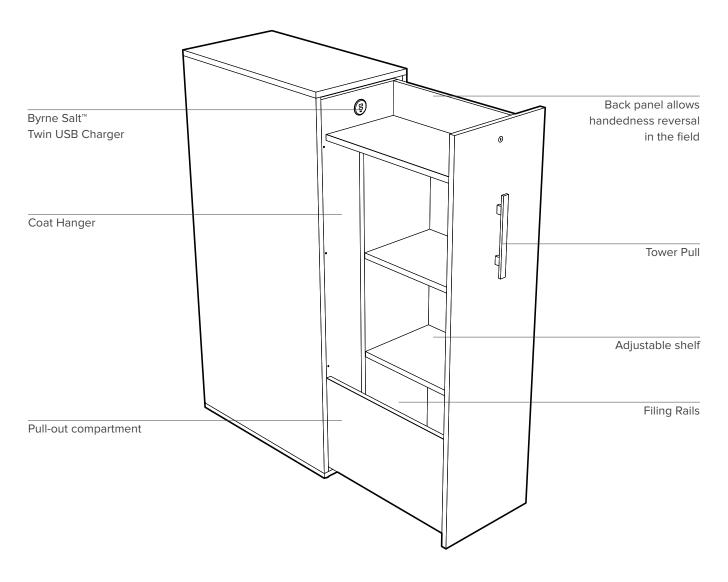

SIDE TOWER TYPICAL




TOOLS



#2 Phillips

1. Plug-In (optional) + Level

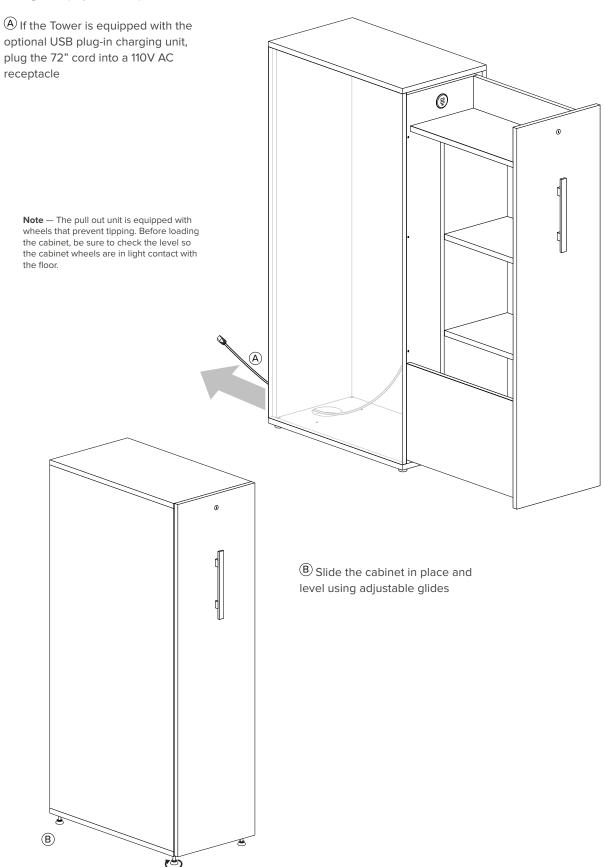

Reverse Handedness 2.

A Open the pull out unit: With #2 Phillips tip, carefully turn the cam (arrow will point towards adjacent panel)to unlock the pins (x6) on the back panel of the unit

B Check to be sure the cams are loose. Then, using two hands, push the panel free. If the panel does not easily disengage, check the cams again. Remove the panel

© Swap the pins to the opposite side of the panel.

D Angle the panel into the unit. If the panel does not fully push into place, check to be sure the cams are in the "open" position.

© Once the panel is seated, lock the cams with a #2 philips head driver to secure.

 ${f Note}$ — Cabinets are delivered as specified, right or left. You may change the handedness of the cabinet by repositioning the back panel.



CAUTION — If the panel is not free after all cams are unlocked, check to ensure pins are still fully seated in panels. These can be pushed into place using a flathead screwdriver. Excessive force can damage reversible panel.

