

ASSEMBLY

C9™ Fixed Height Desk



View Digitally

Important Safety Instructions

This product is for commercial use only.


Read all instructions before using (this furnishing).

WARNING -

Risk of injury to persons:

1. Using C9 Pendant Storage (all types) with a C9 Fixed Desk with casters can create tip-over issues which can lead to injury.
2. Using a C9 Pendant Storage File, Pencil/File, or Pencil/Box on 24" deep desks can create tip-over issues which can lead to injury.
3. Using C9 Pendant Storage Pencil unit on 24" deep tables under 57" wide, requires the use of a counterweight - failure to install can create tip-over issues which can lead to injury.
4. Using C9 Pendant Storage Pencil/File on 30" deep tables under 60" wide, requires the use of a counterweight - failure to install can create tip over issues which can lead to injury.

C9 Fixed Height Desk Basic Components

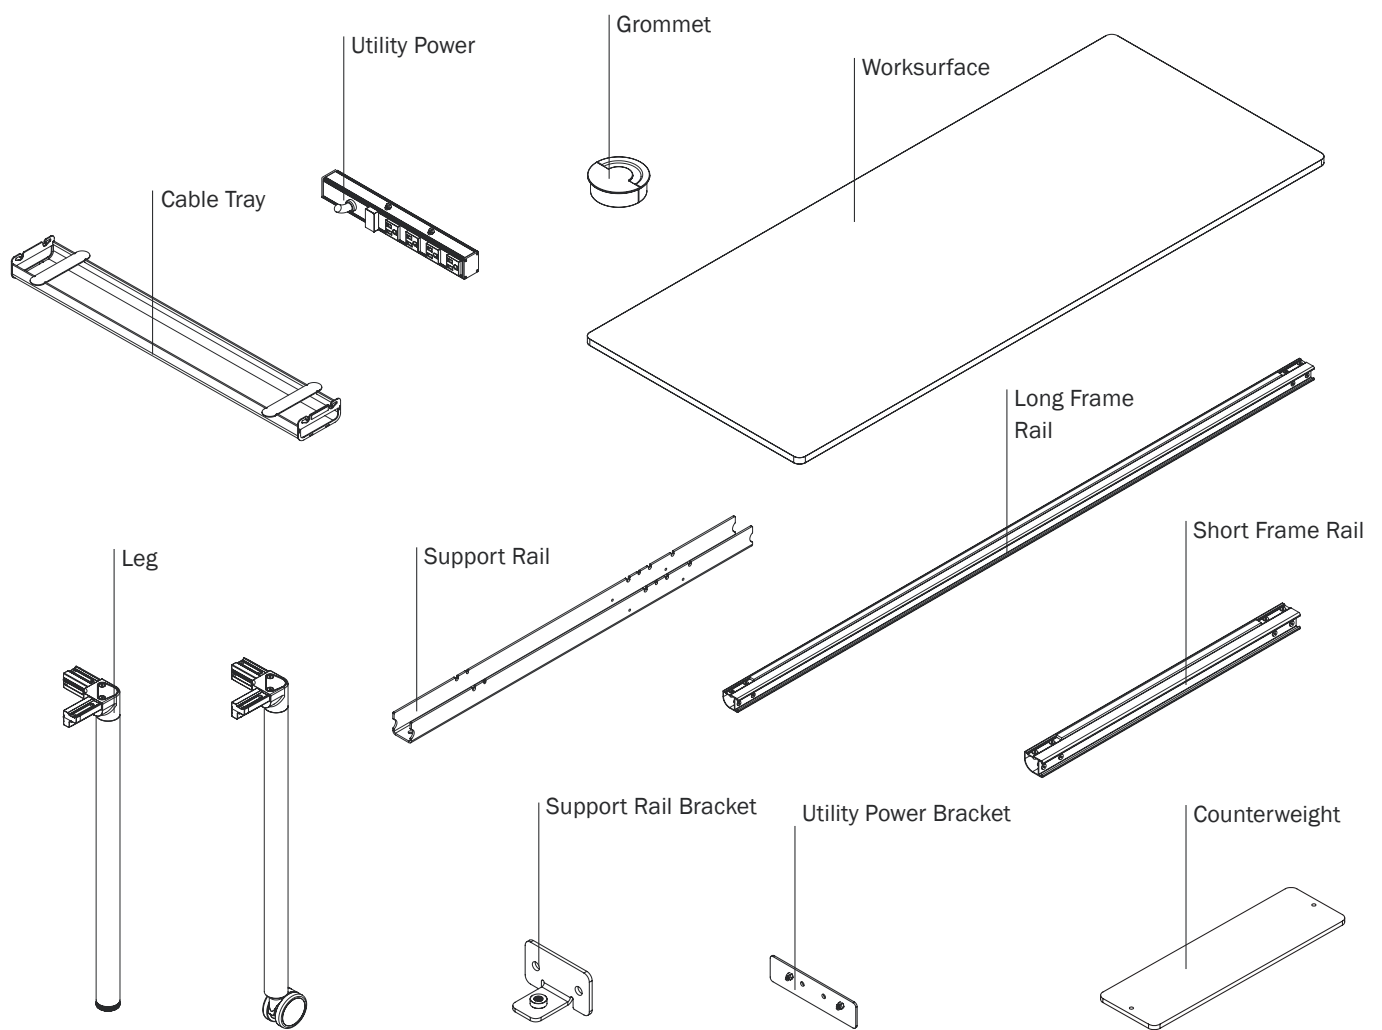


NOTE:


1. C9 Pendant Storage cannot be used in combination with C9 Mobile Desks.
2. C9 File Pendant, Pencil/File Pendant, and Pencil/Box Pendant Storage cannot be used on 24" deep C9 desks.

C9 Fixed Height Desk Hardware & Tools


Hardware




M6-1.0x12mm Low
Profile Cap Screw
(0001140)



0.25x0.563
Plastic Spacer
(0001249)



M4-0.7x18mm
Socket Head Cap
Screw (0001250)



Top Attachment
Clip (0001156)




Rail Nut
(0001120)




Wood Screw
#10x1
(122850)

Tools





3mm Hex Key




Phillips Screwdriver

1. Attach Legs to Short Frame Rails

Insert the legs into the short frame rails and secure them using 8 screws (0001140). Repeat this step for the other side.


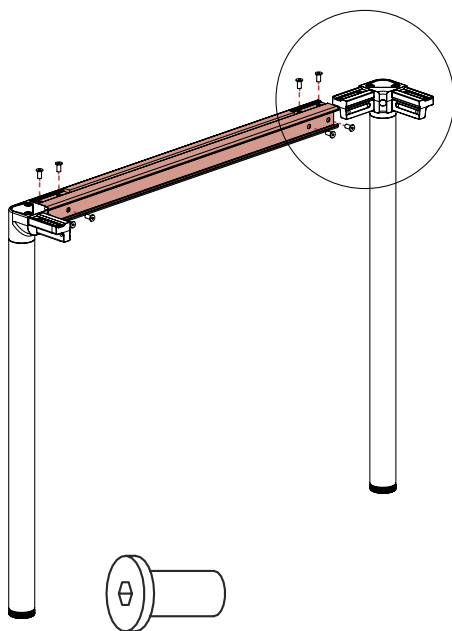


M6-1.0x12mm Low
Profile Cap Screw
(0001140)

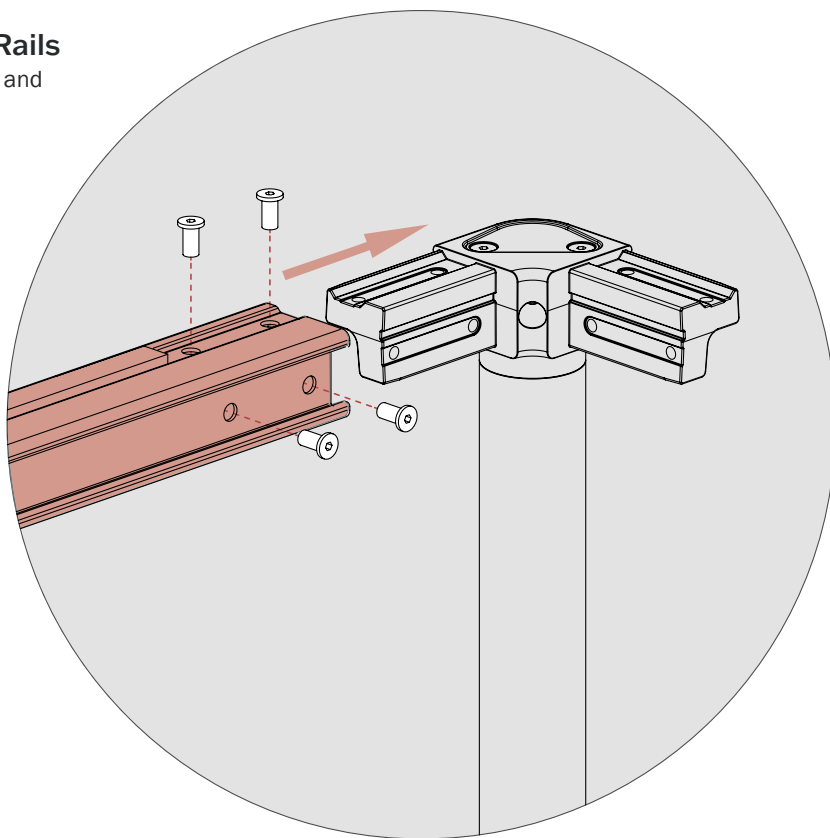


2. Attach Assembly to the Long Frame

Slide the long frame rails onto the leg assembly and secure them using 8 screws (0001140). Repeat this step for the other side.


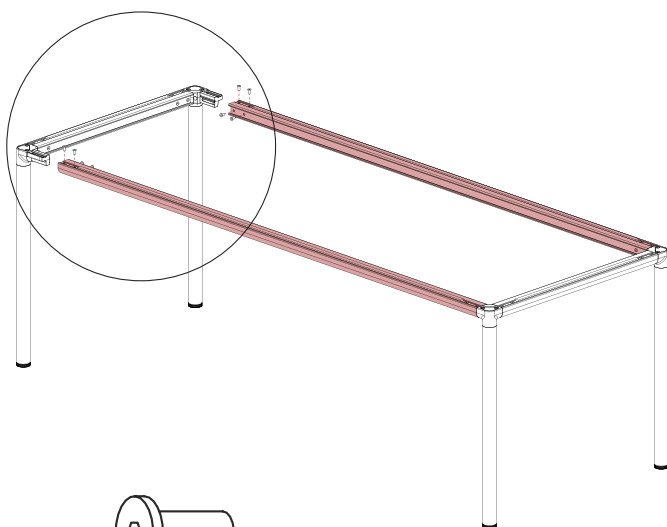


M6-1.0x12mm Low
Profile Cap Screw
(0001140)

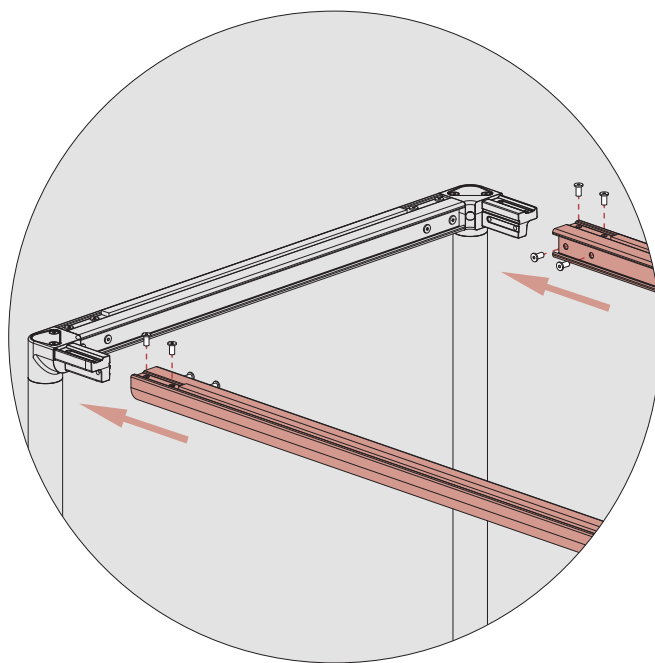



3. Position Rail Nuts

Rotate the rail nuts (0001120) into place inside the long frame rail channel. Firmly push them together until the angled surfaces are touching. Place two sets of rail nuts on the back long frame rail, and two sets on the front long frame rail, for a total of four sets.

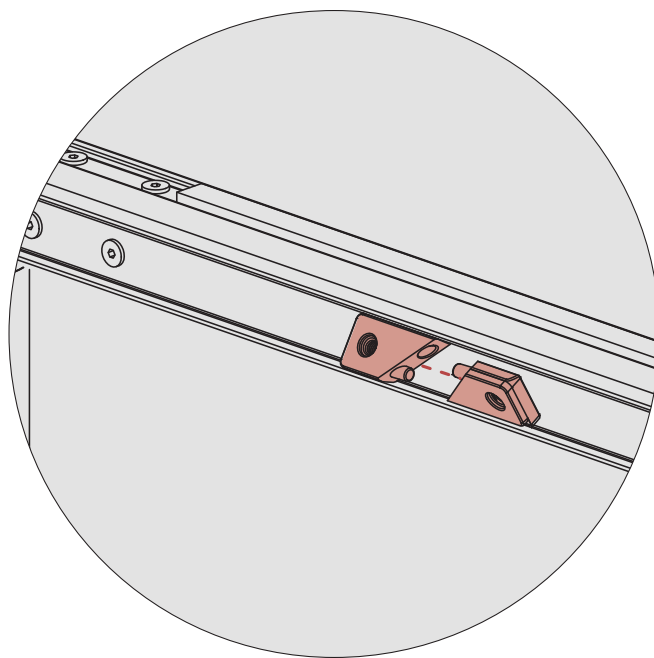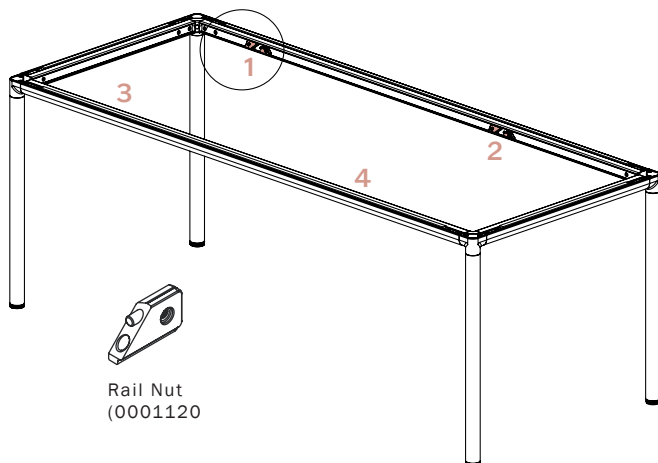



4. Attach Support Rail Brackets to Frame

If the desk is installing with optional Pendant Storage, determine what size the storage is, and which side of the desk the storage will attach. For 8"W storage, attach the brackets at the inner desk indicator (10-5/8" away from the short frame rail). For 15"W storage, attach the brackets at the outer desk indicator (17-5/8" away from the short frame rail). Tighten the bracket to the rail nuts using two screws each (0001140). Install the second set of brackets on the other side of the desk at the opposing indicator locations, as shown below. If no pendant storage, use the same spacing logic, with one support rail at the inner location on one side of the desk, and one at the outer location on the other side.

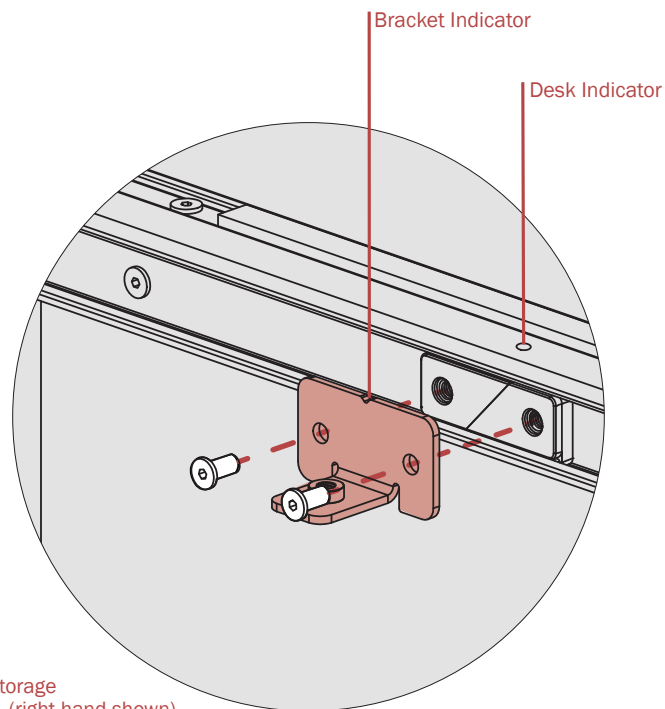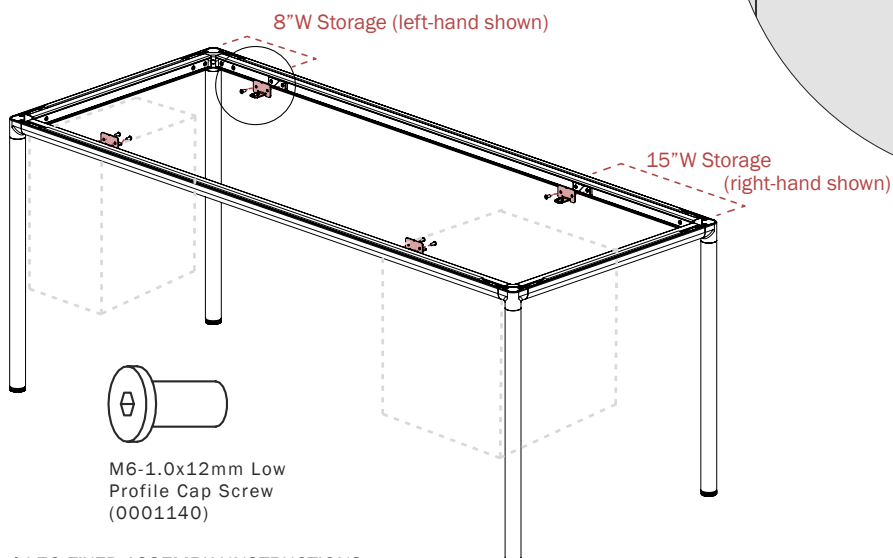


5. Attach Support Rails to Frame

Raise the support rail into position, and line up the holes in the brackets with the holes in the support rail. Secure the rail in place with 2 screws (0001140). Repeat this step for the second support rail.


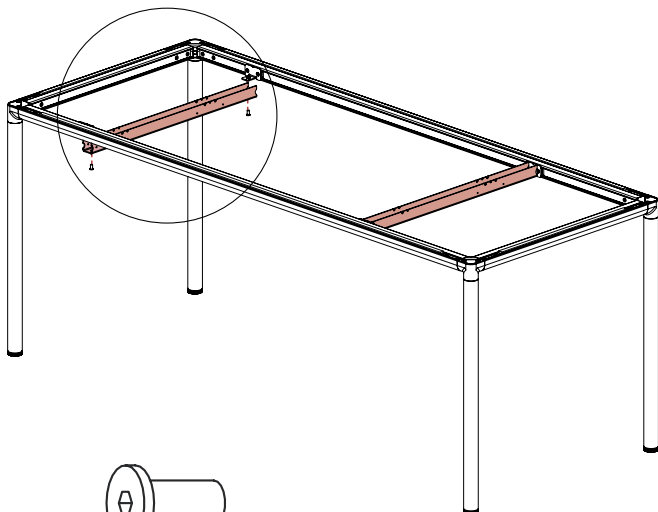


M6-1.0x12mm Low
Profile Cap Screw
(0001140)

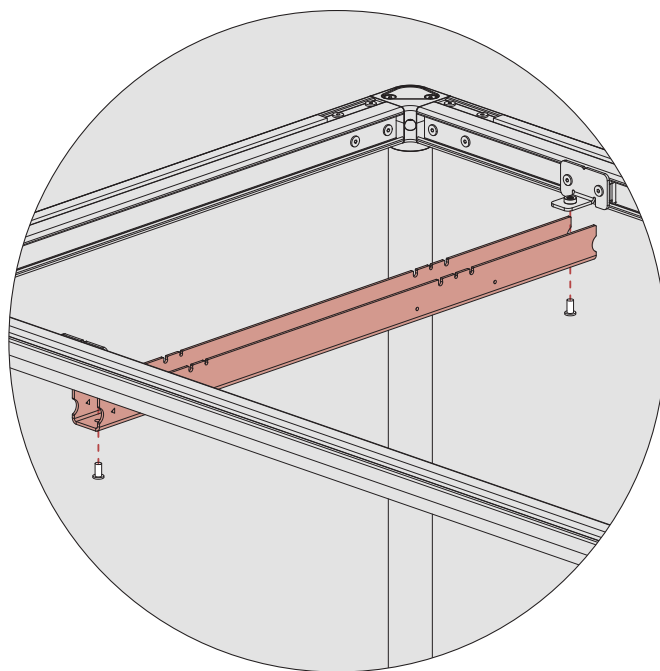

6. Optional Cable Tray


Place the plastic spacers (0001249) over the screws (0001250) and attach the screws to the insides of the support rails. The spacers should be facing each other. Repeat this on the opposite side of the support rail.

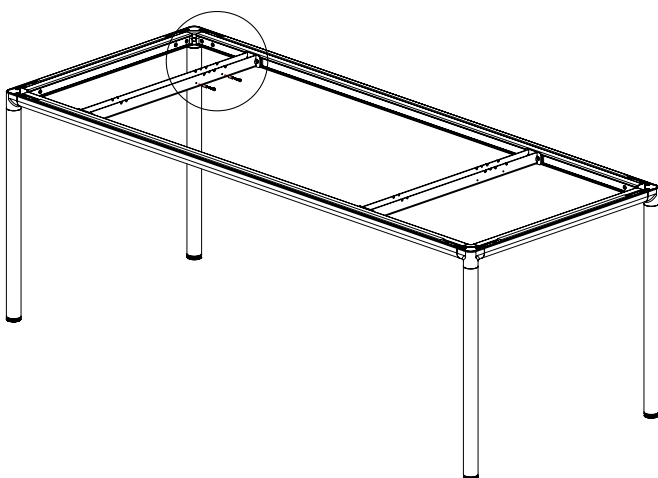

0.25 x 0.563 Plastic
Spacer (0001249)





M4-0.7 x 18mm
Socket Head Cap
Screw (0001250)

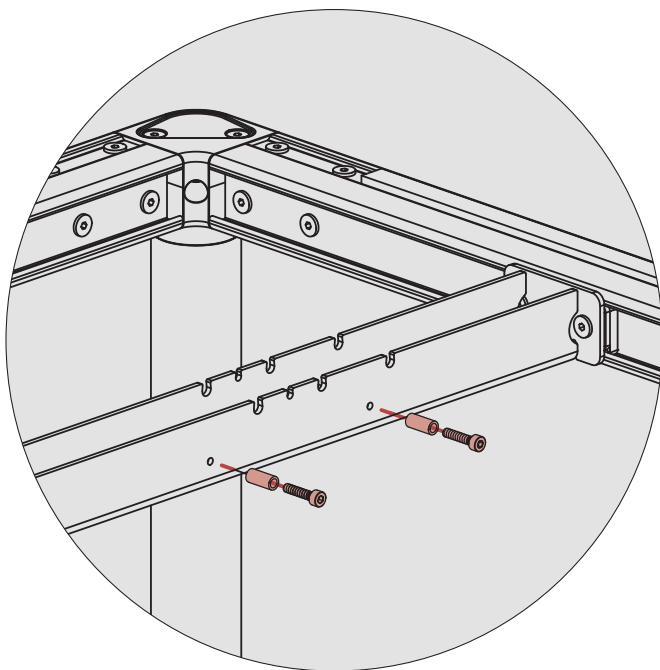


7. Hang Optional Cable Tray

Hang the Cable Tray by aligning the pins with the back cutout and lifting it over the catch.

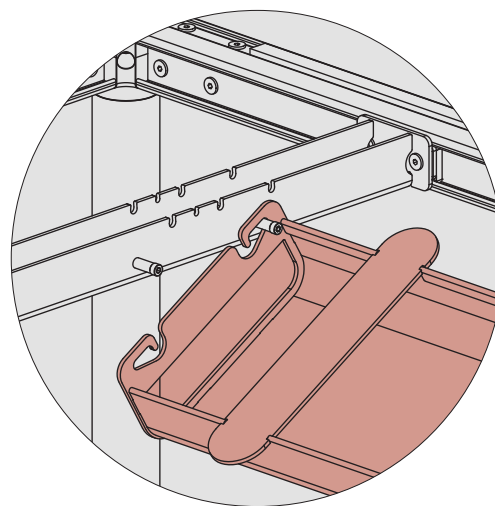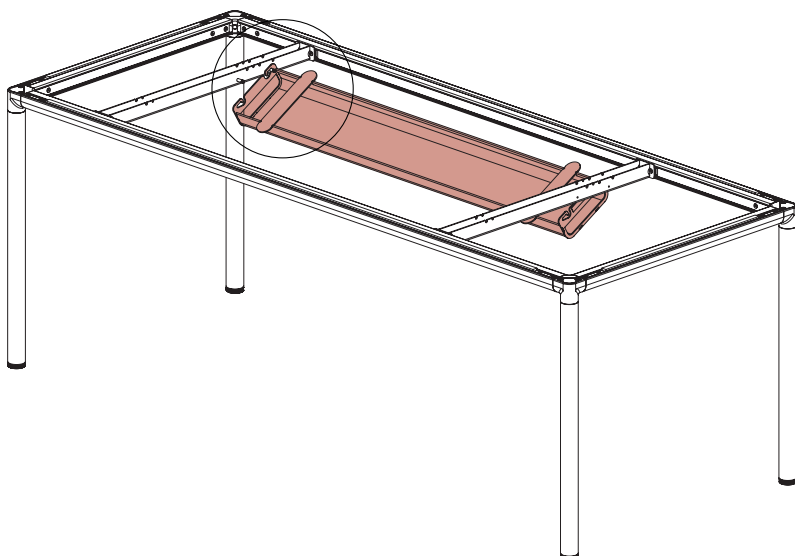



8. Optional Utility Power

Place the rail nuts (0001120) in the frame rail as done in step 3. Attach the utility power clips to the utility power bracket using the hardware provided. Be sure to use the outermost holes in the bracket (a). Attach the utility power bracket assembly to the frame rail using 2 screws (0001140) (b).

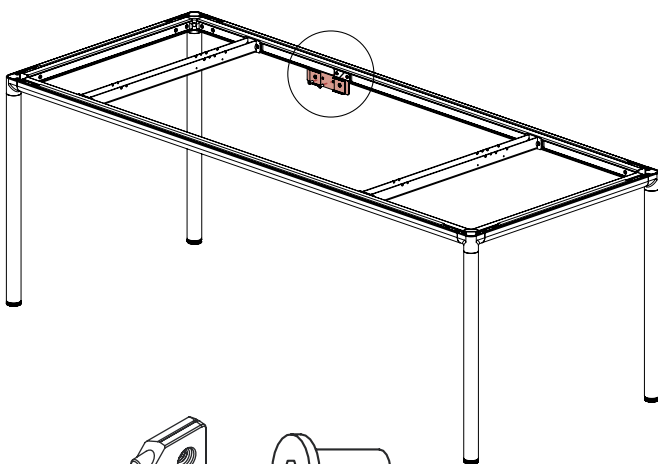


Rail Nut
(0001120)

M6-1.0x12mm Low
Profile Cap Screw
(0001140)

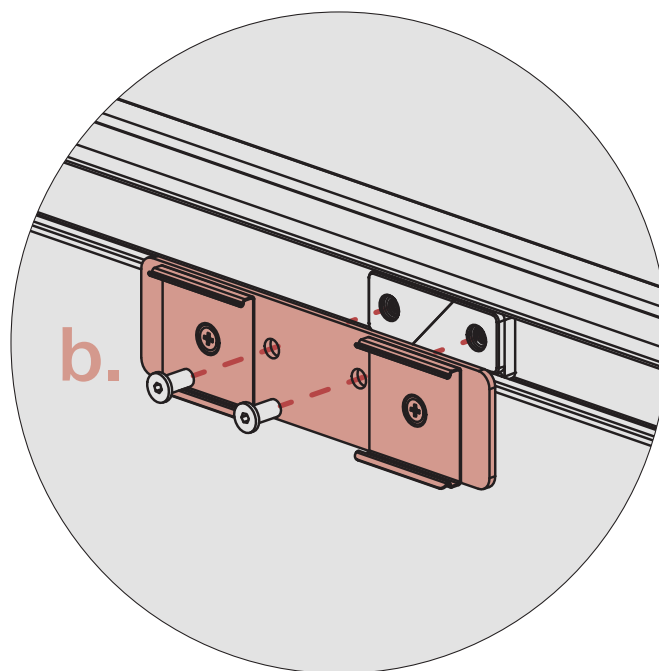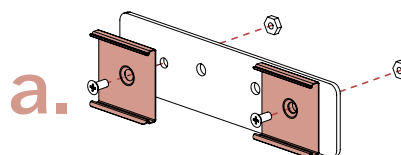

9. Attach Utility Power Unit

Clip the utility power unit into the utility power bracket assembly.

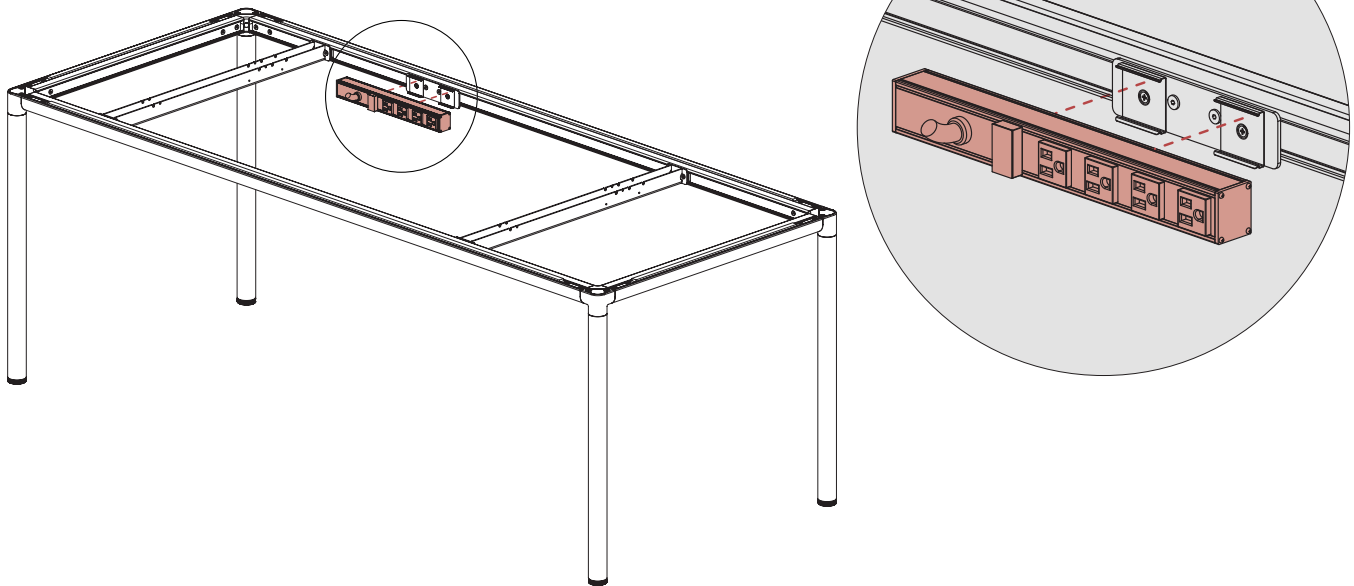


10. Attach Counterweights if Applicable

The counterweights must be attached if the desk meets either of the following criteria:


1. The desk is 24"D, is 54"W or less, and a Pencil Pendant will be installed or,
2. The desk is 30"D, is 57"W or less, and a Pencil/File Pendant will be installed.

Attach the counterweights on the same side as the Pendant Storage with two (122850) wood screws.

Note: It may be necessary to move the counterweights forward to accommodate Modesty Panel brackets.




Wood Screw
#10x1
(122850)

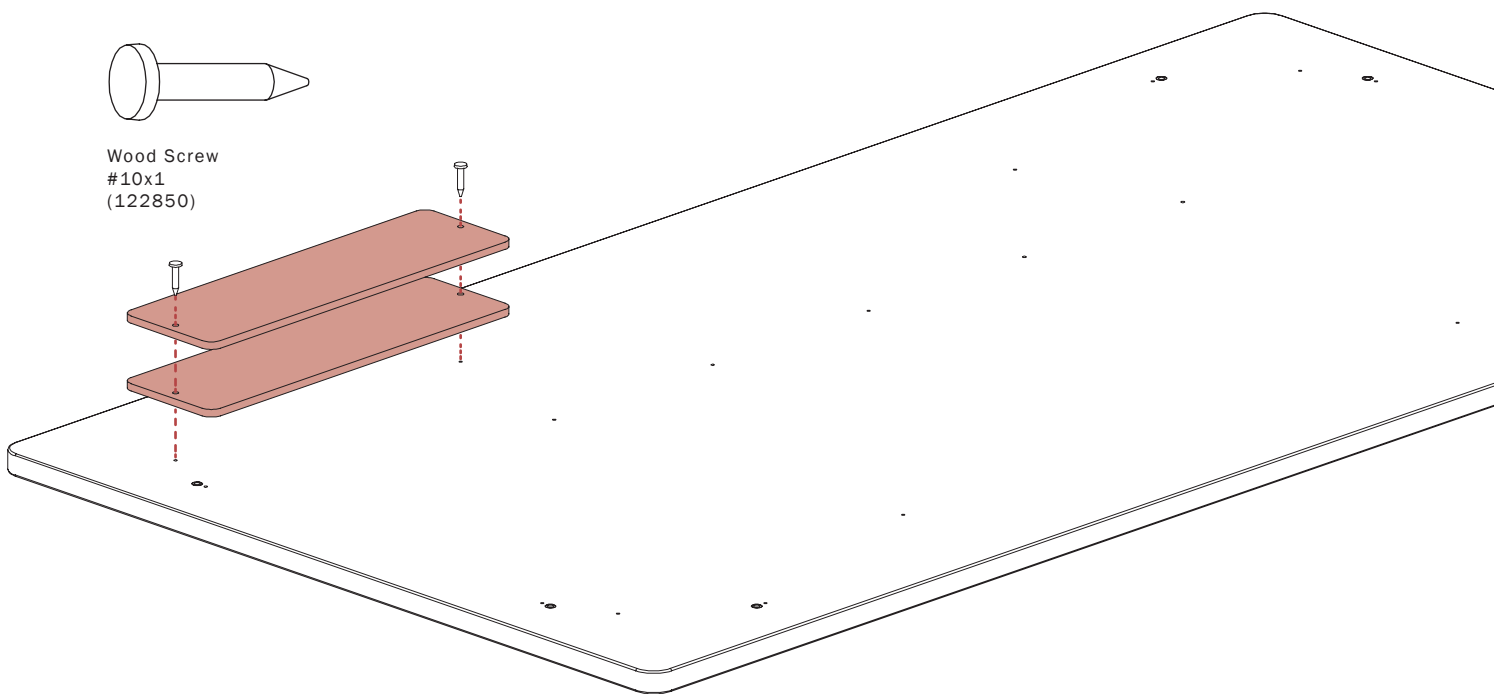




11. Place Worksurface on Table Frame

Place the worksurface on the table frame and ensure the spacing around the outside is consistent.

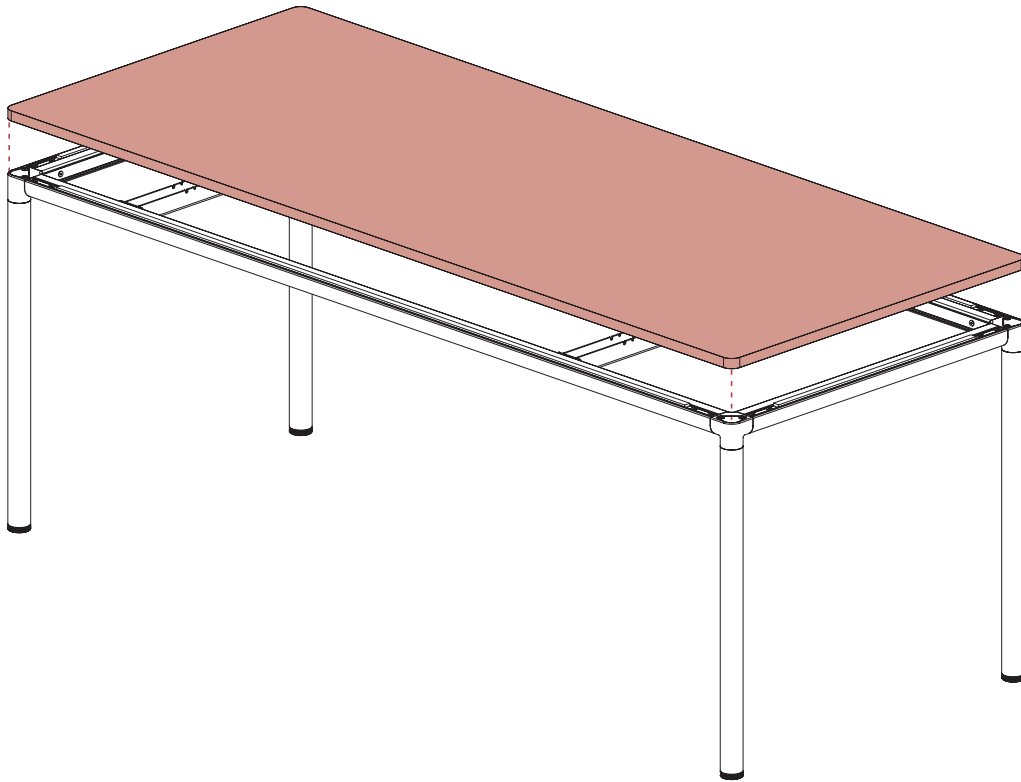


12. Secure Worksurface

Clip the top attachment cap onto the frame rail over one of the existing worksurface inserts. Attach screws (0001140) through the top clip into the worksurface. Repeat for a total of 10 caps.

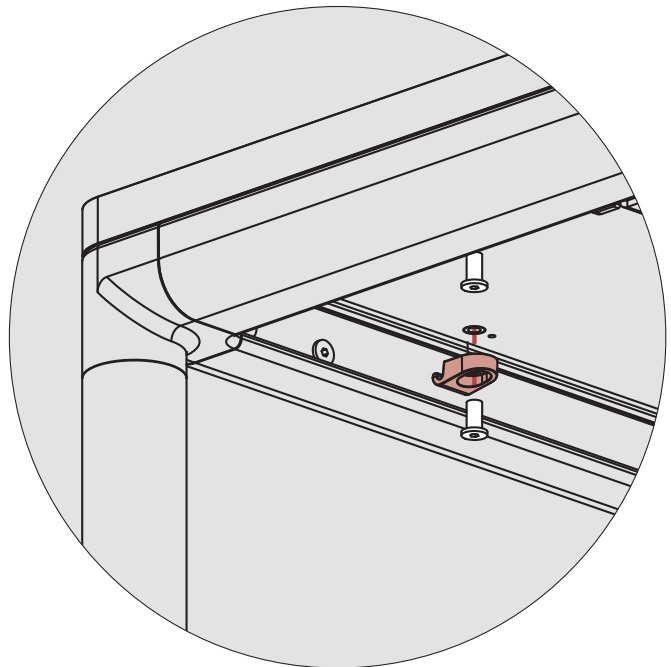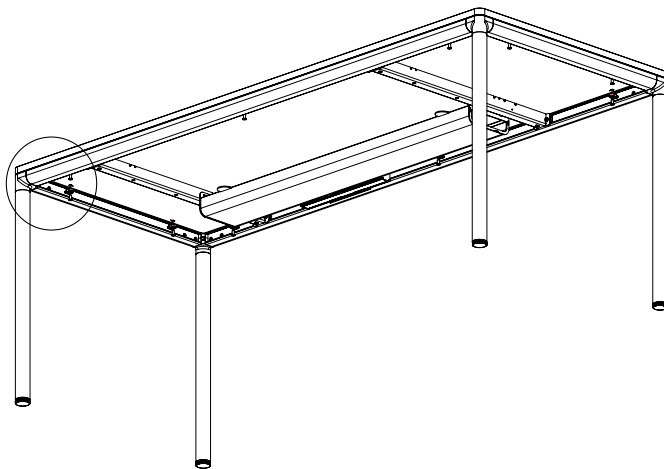

Top Attachment Cap
(0001156)



M6-1.0x12mm Low
Profile Cap Screw
(0001140)