



ASSEMBLY

D9 Desk Accessories

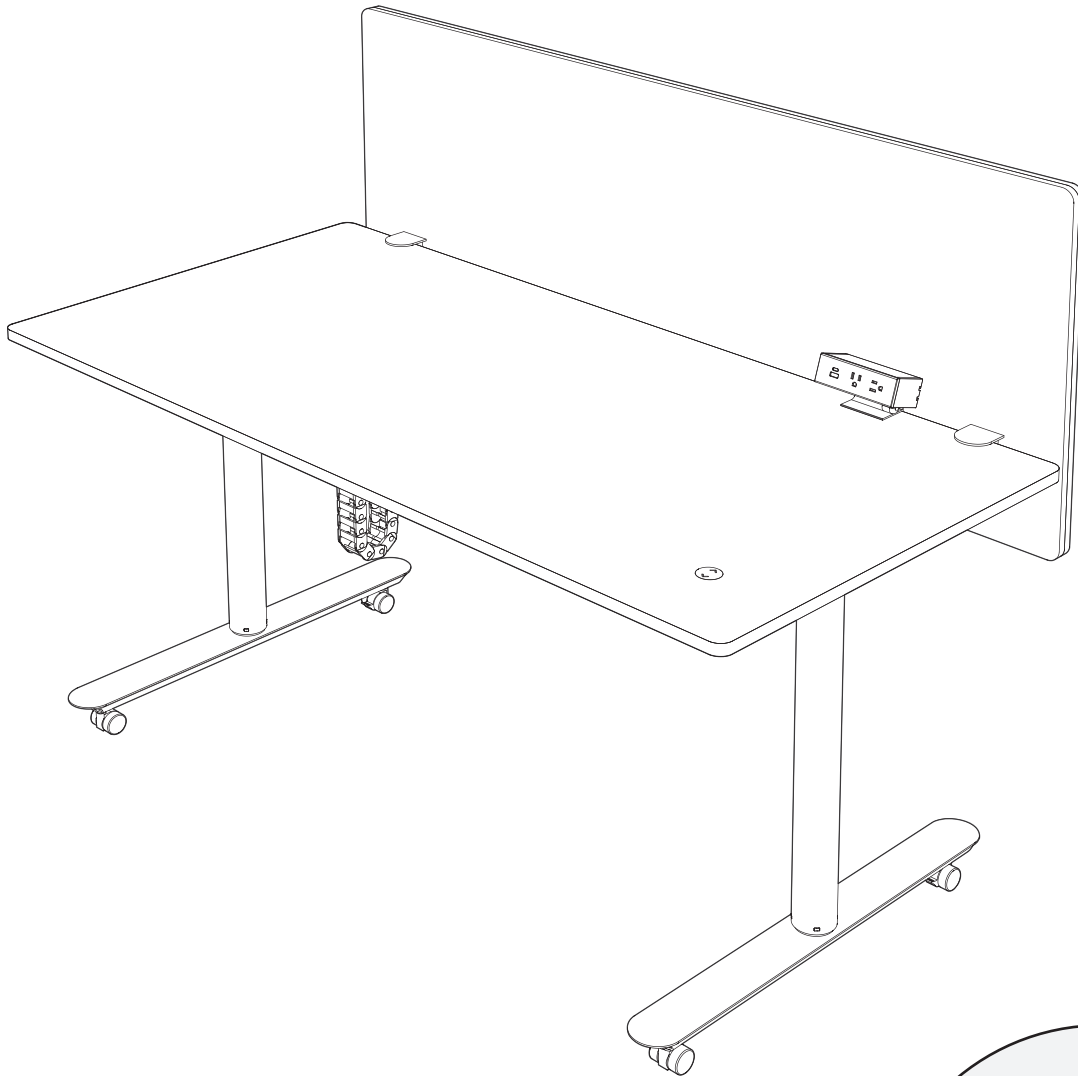


View Digitally


C9 Pendant Storage Basic Components

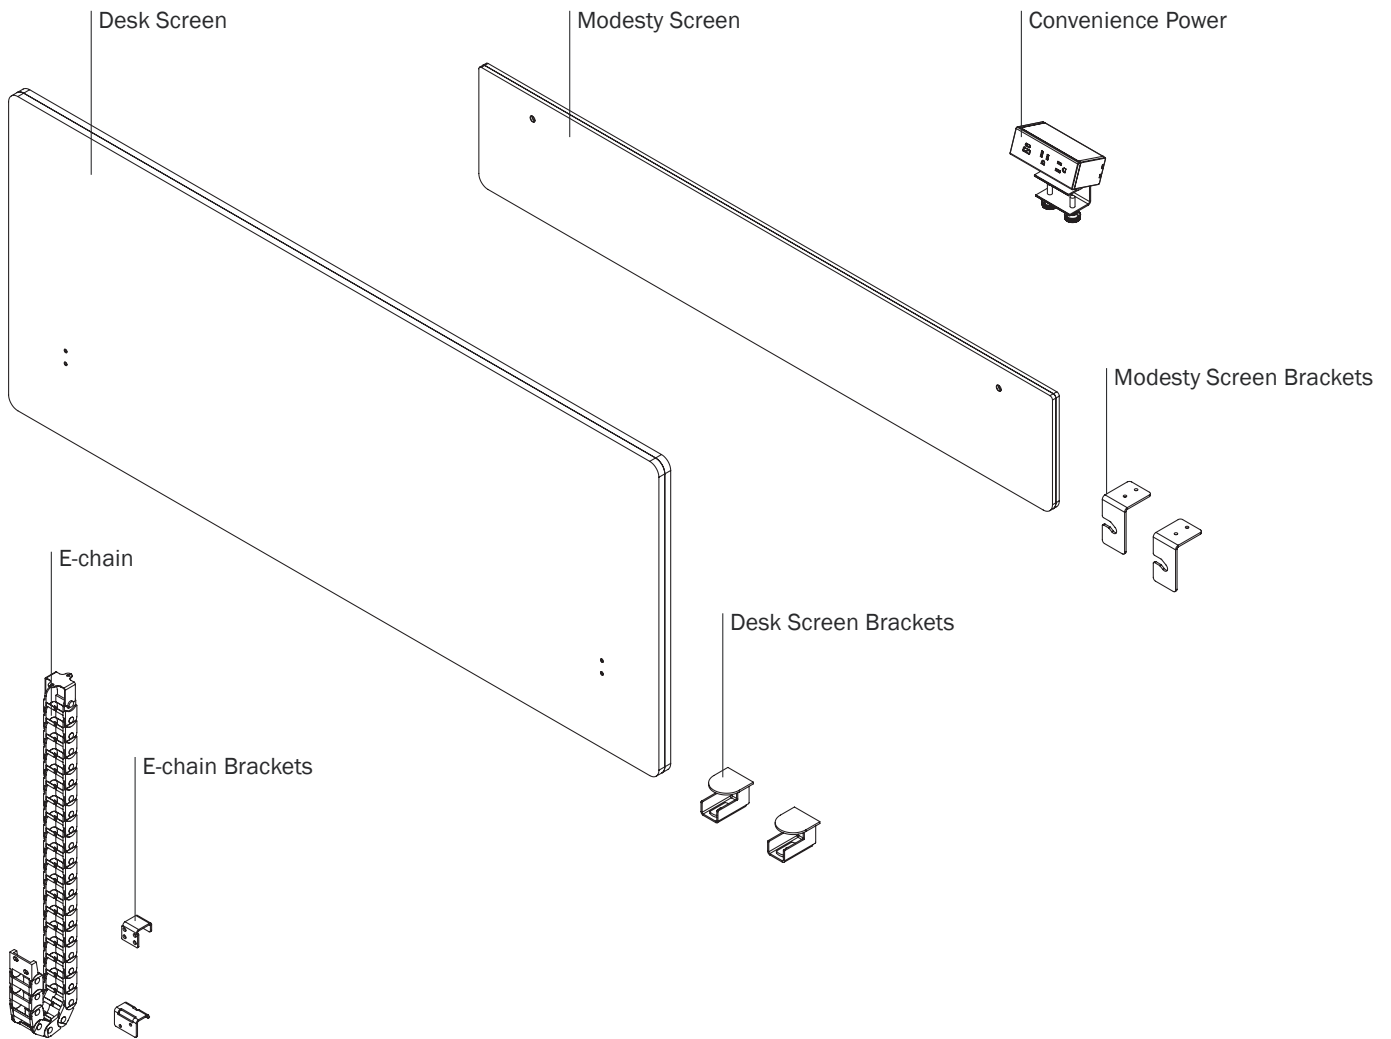


Hardware




M6-1.0x12mm Low Profile Cap Screw
(0001140)



M6-1.0x8mm Low Profile Cap Screw
(0001259)

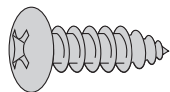

Truss Head Panhead Screw #10x5/8"
(122800)

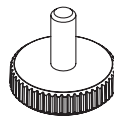

Glide, 34mm DIA, M10x1.5 (0001154)




Nylon Shoulder Washer
.75x.075x.408x.155
(0001408)


Tools



3mm Hex Key

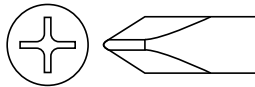

Philips Head Screwdriver Bit


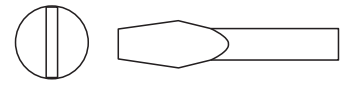


Philips Head Screwdriver Bit

Convenience Power

1. Attach Convenience Power to Desk


Place power unit clamp on the back surface of the desk (a.). Once positioned, tighten clamping screws until secure (b.).

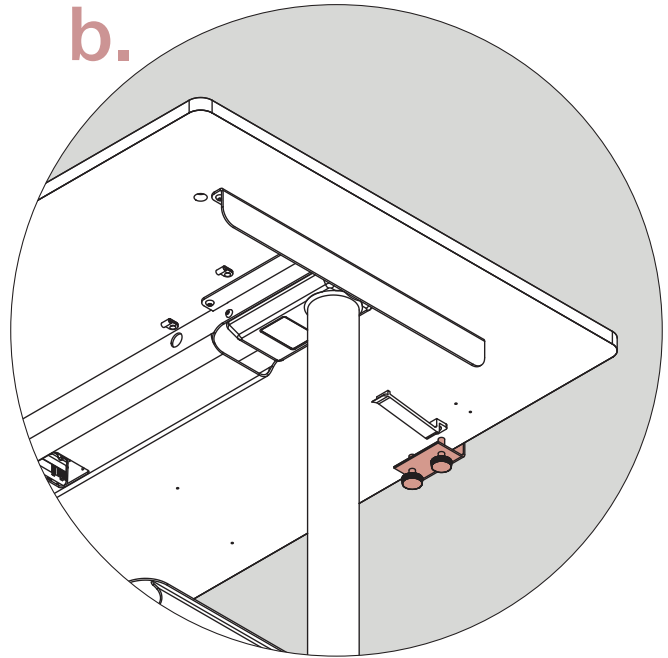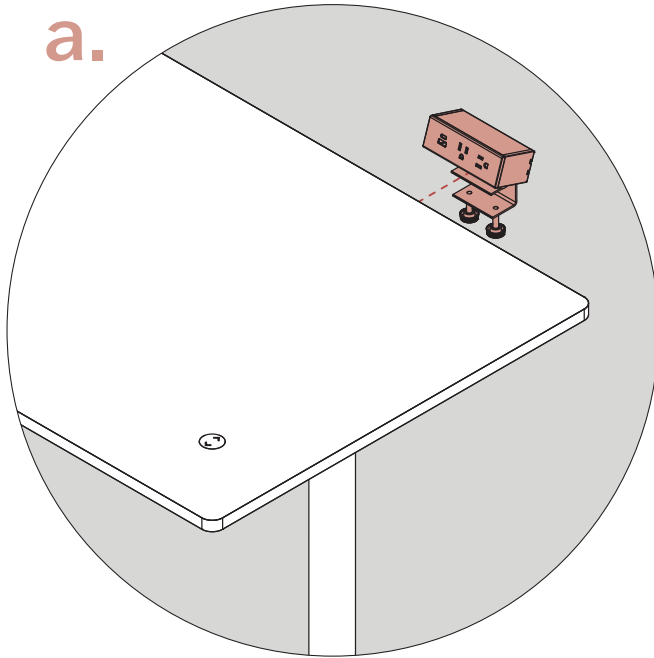



Privacy Screen

1. Mount Brackets to Screen

Attach brackets to screen using (4) screws (0001140), (2) screws per bracket, as shown below.


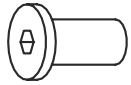


M6-1.0x12mm Low
Profile Cap Screw
(0001140)

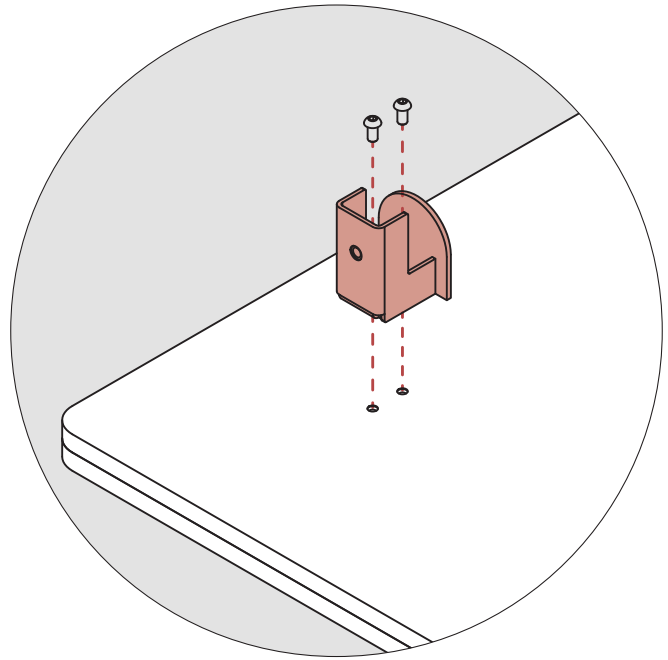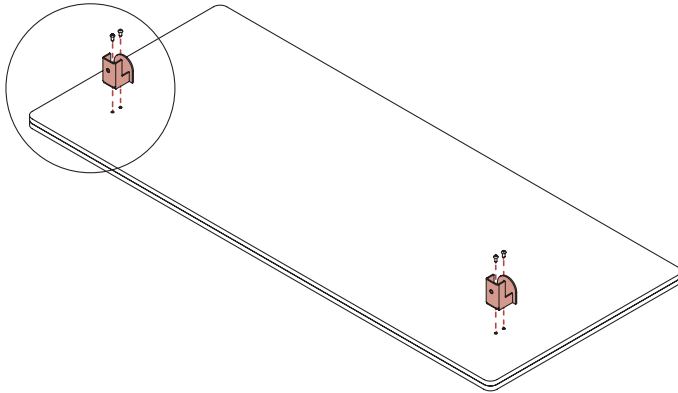


2. Insert Screen Clamping Glide

Slide the clamping glide into the bracket and screw down through the hole in the bracket. Leave enough space for the worksurface between the glide and the top of the bracket.

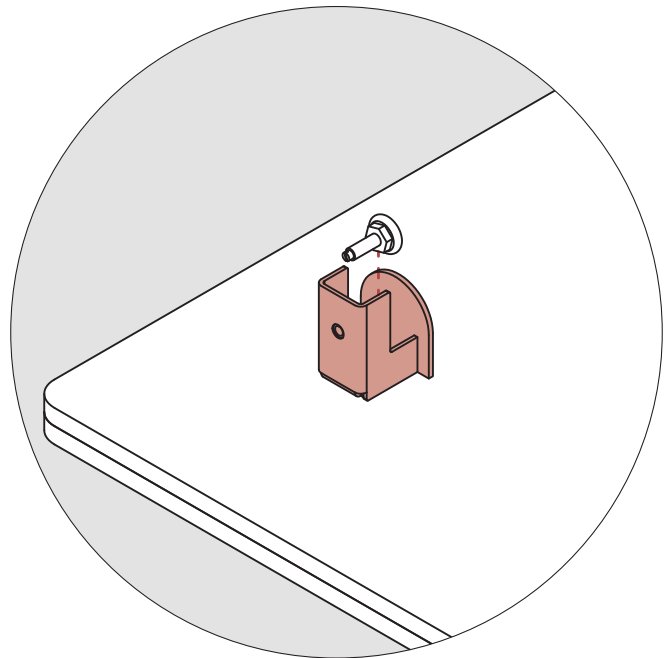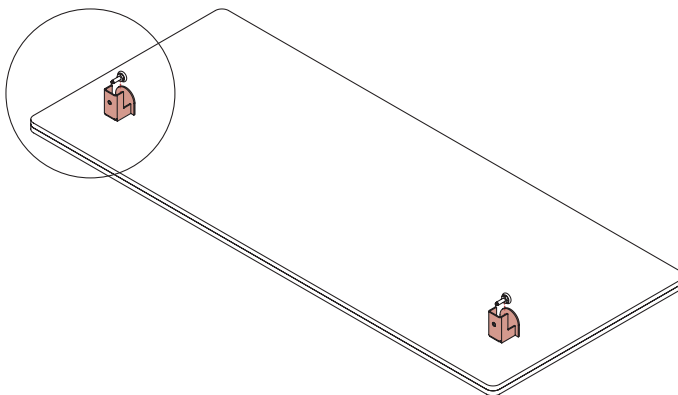

Privacy Screen Continued


- 3. Mount Screen on Desk**
Slide brackets onto desk surface, and position screen in place (a.). Secure the screen to the desk by tightening the clamping glide against the underside of the worksurface with a flathead screwdriver (b.).

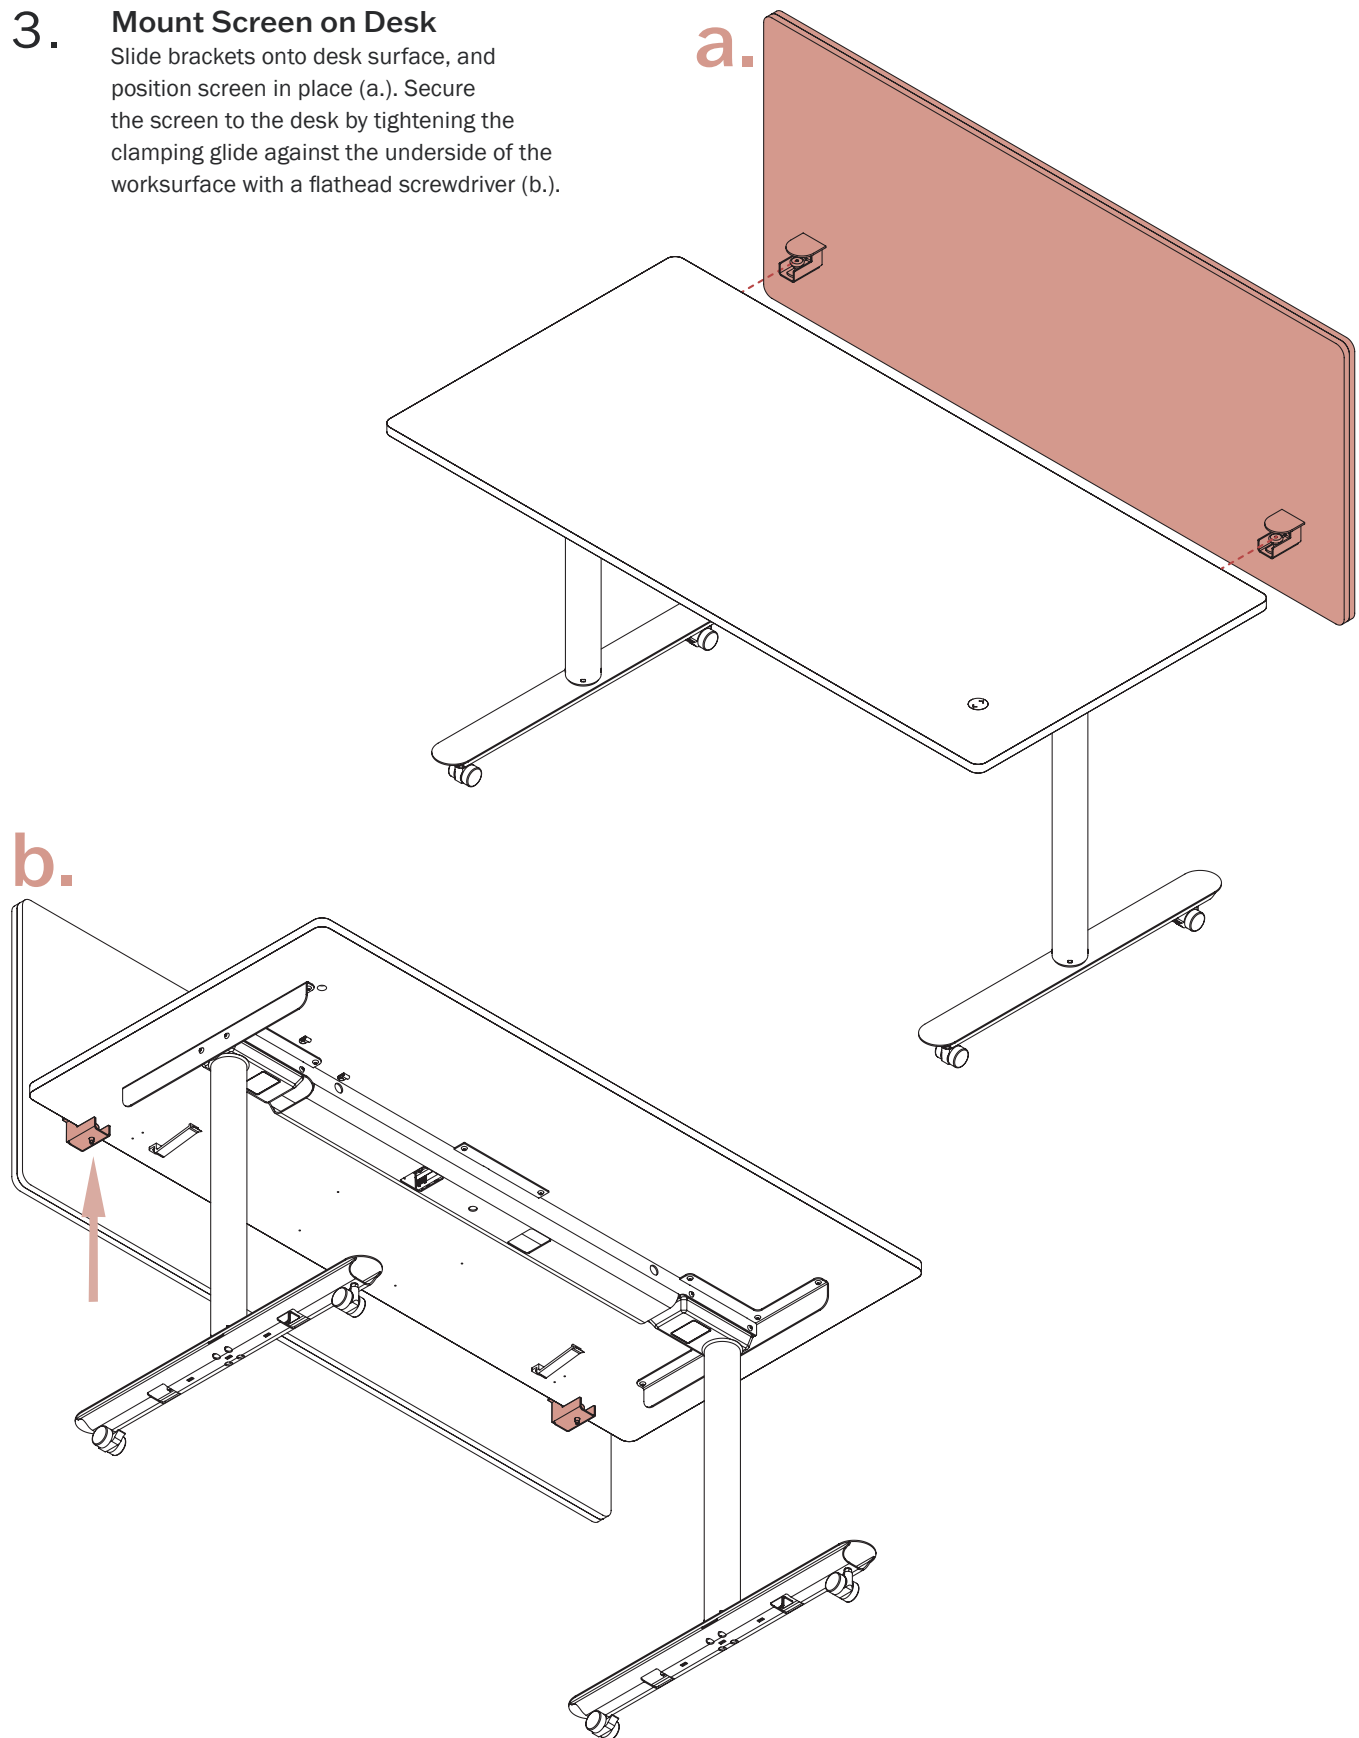



Modesty Screen

1. Mount Modesty Brackets to Desk

Attach brackets to worksurface using (4) screws (122800), (2) screws per bracket, as shown below.

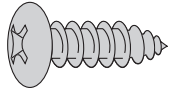


Truss Head Panhead
Screw #10x5/8"
(0001259)

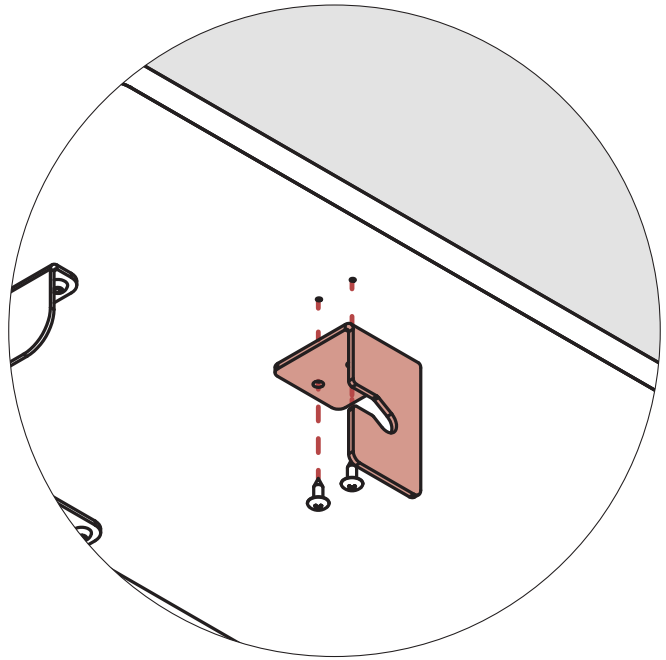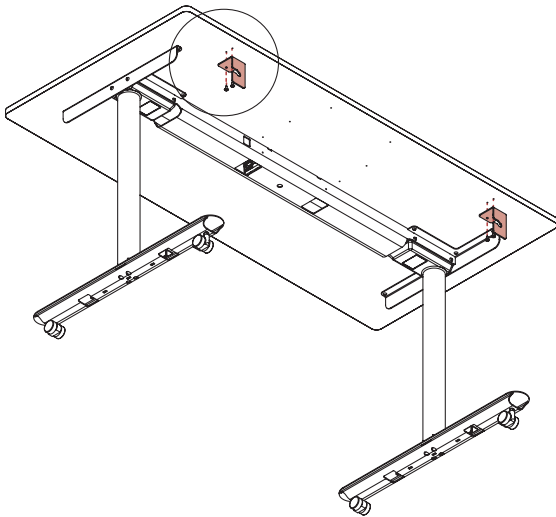

2. Attach Modesty Hardware to Screen



Attach the threaded knob to the modesty screen, sandwiching the nylon shoulder washer with the smaller side touching the screen. Complete on both sides of screen.

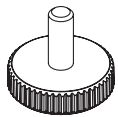

Glide, 34mm DIA,
M10x1.5 (0001154)





Nylon Shoulder
Washer
.75x.075x.408x.155
(0001408)

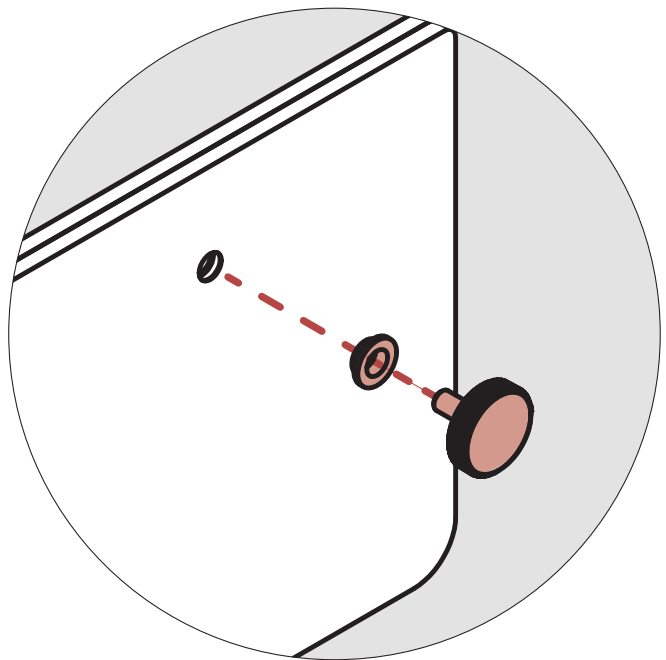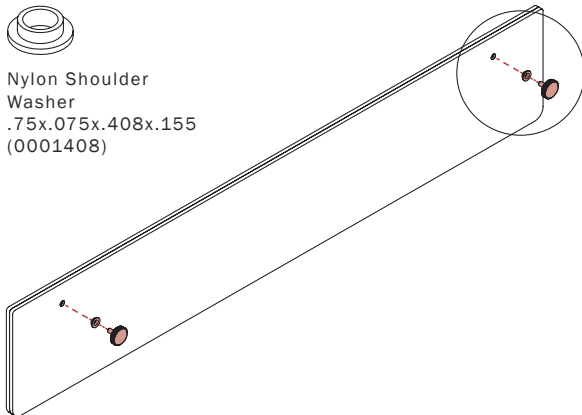

Modesty Screen Continued




- 3. Mount Screen to Desk**
Slide the modesty hardware onto the brackets until the screen is fully seated.

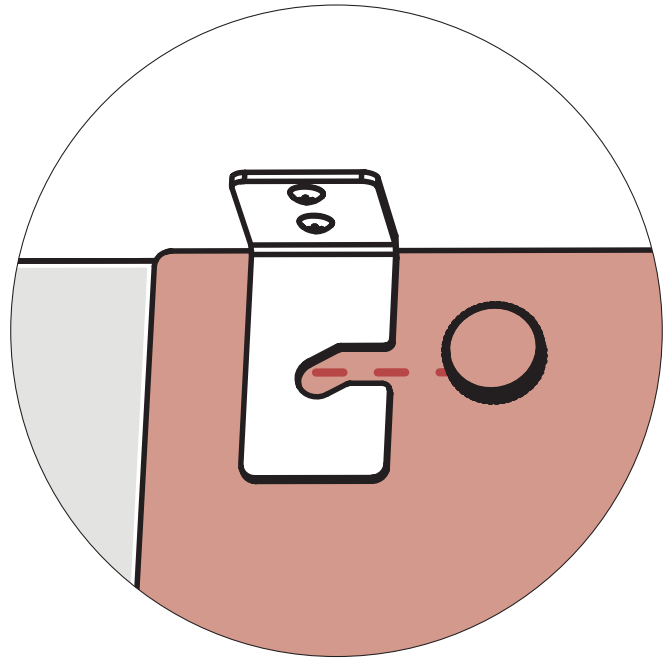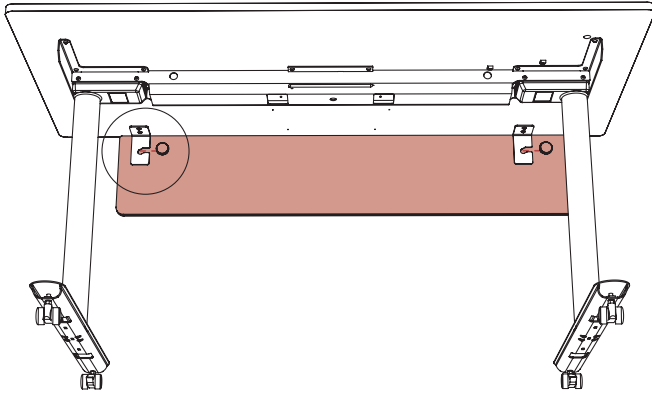

E-Chain



1. Inner Rail E-Chain Bracket

Rotate the inner rail E-Chain bracket into the slot that runs length-wise underneath the top plate of the rail. Hold this bracket against the underside of the top plate of the rail.

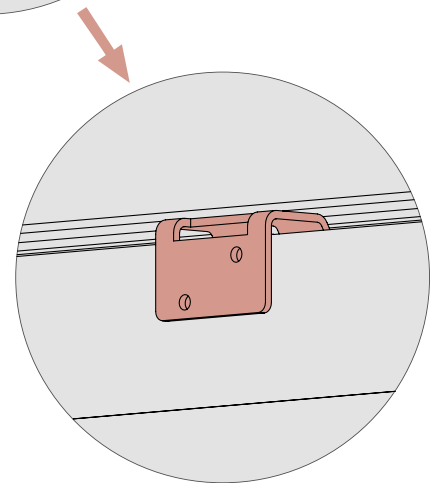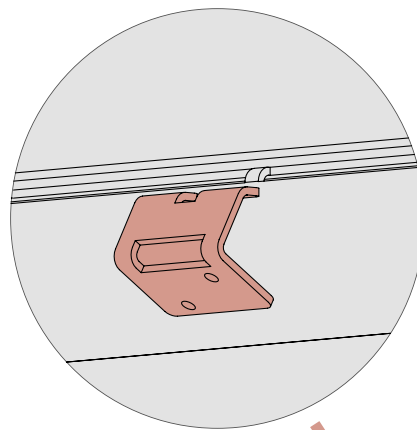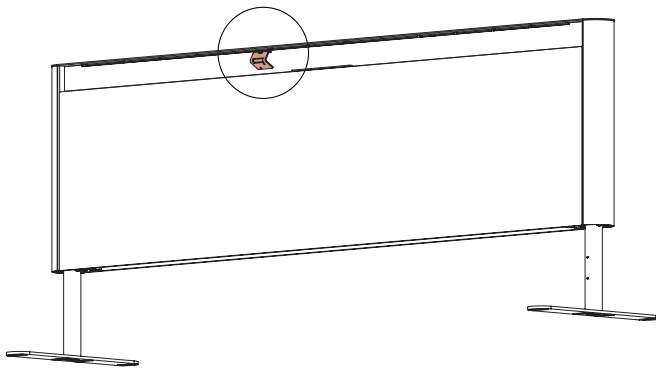

2. Outer Rail E-Chain Bracket


Slide the outer rail E-Chain bracket into the slot of the inner rail E-Chain bracket.

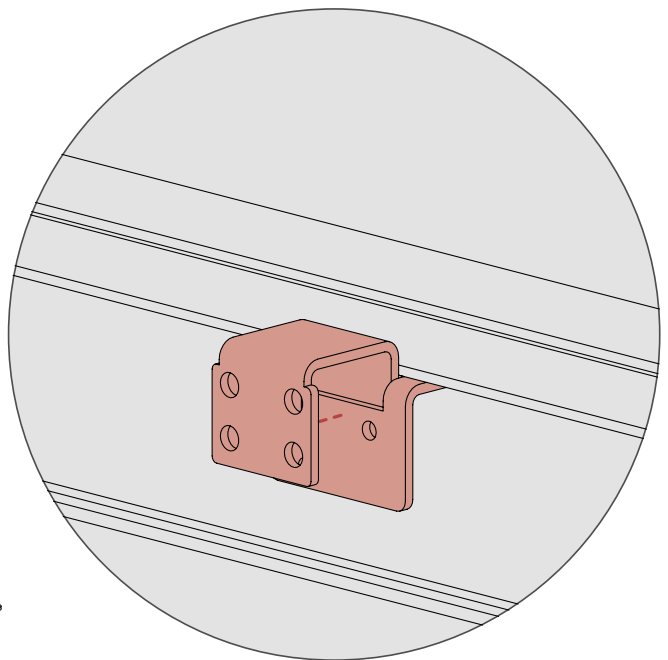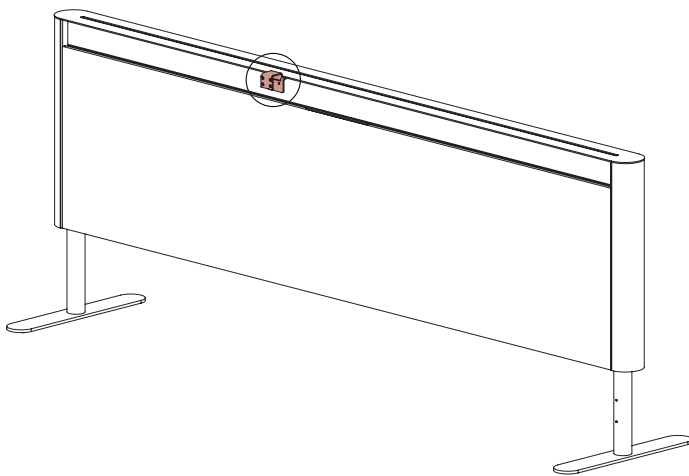


E-Chain Continued

3. Attach E-Chain Bracket to Rail

Place the free end of the E-Chain between the inner and outer rail chain brackets and align the holes. Attach the three parts with two screws (0001140) into the tapped holes of the inner-most bracket. The outer bracket should be pressed against the rail.


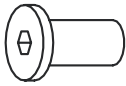


M6-1.0x12mm Low
Profile Cap Screw
(0001140)

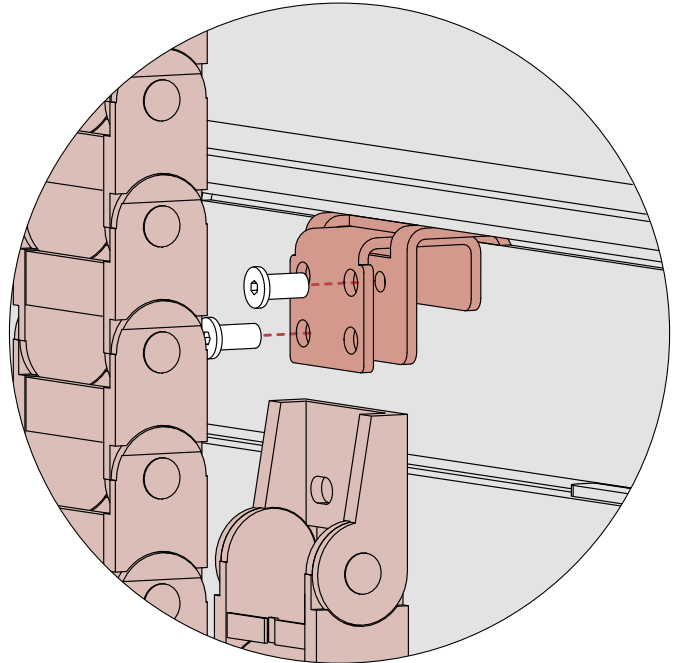

4. Attach E-Chain to Worksurface

Attach the opposing end of the E-chain to the underside of the worksurface with two screws (122800).

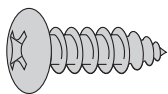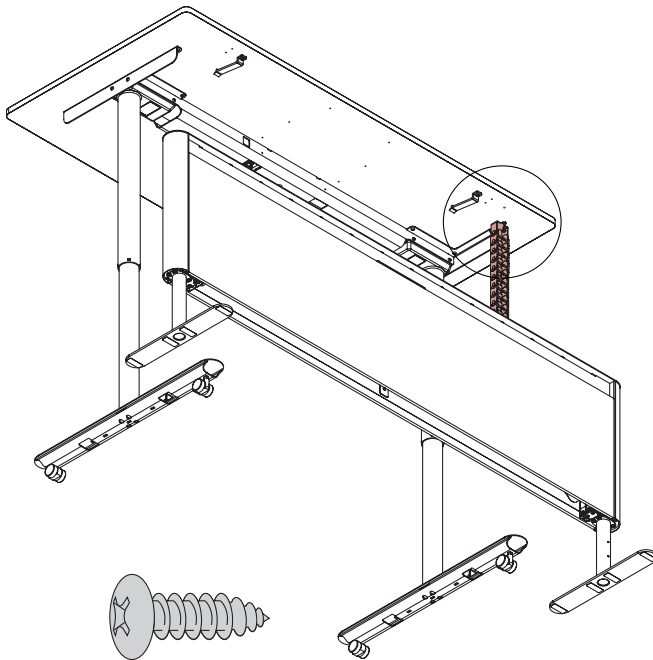

Truss Head Panhead
Screw #10x5/8"
(122800)

