


# ASSEMBLY

## M2 Grommet

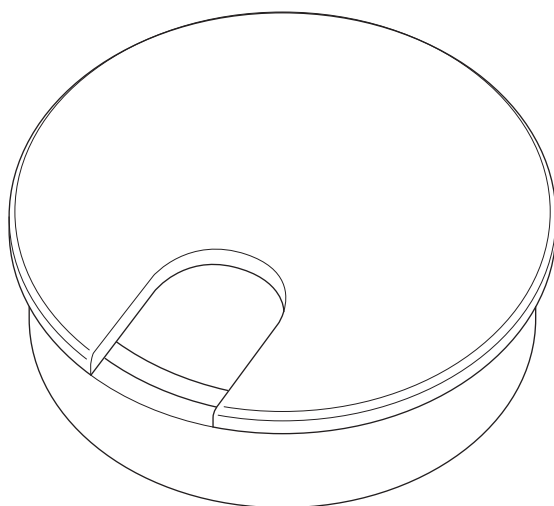


View Digitally




### Note

Field installed  
grommets are  
ordered separately  
(part # 061300).

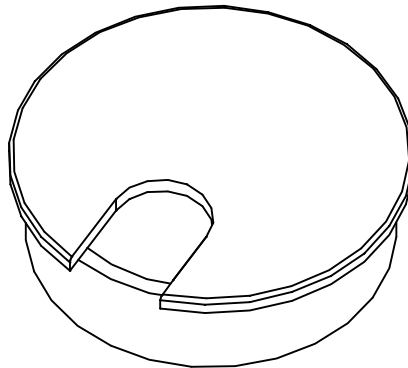

### Step 1

Pick a grommet  
location free of other  
hardware. Tape off  
affected area on desk  
surface with low  
adhesive tape.

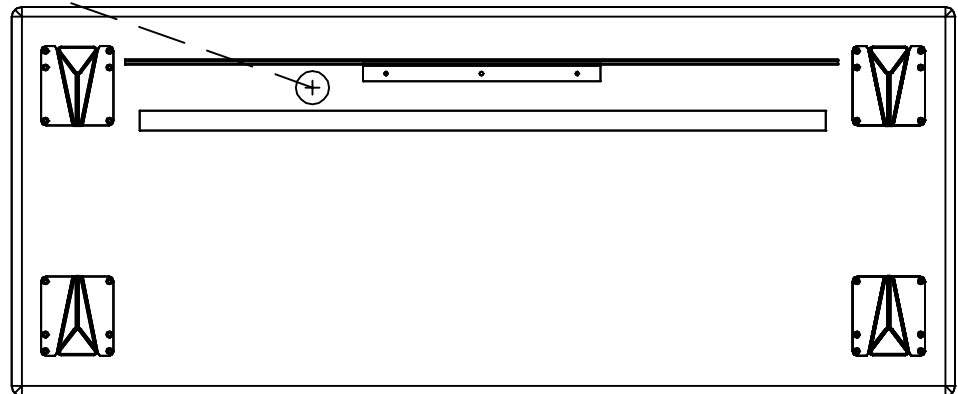

### Step 2


Mark center of the hole  
using a punch or drill bit  
to set hole so the drill bit  
does not "walk."

### Step 3

Pre-drill hole.

### Step 4

Follow with 2 1/2" hole saw  
from top. Be sure to hold  
drill steady and spin slowly  
through the laminate.

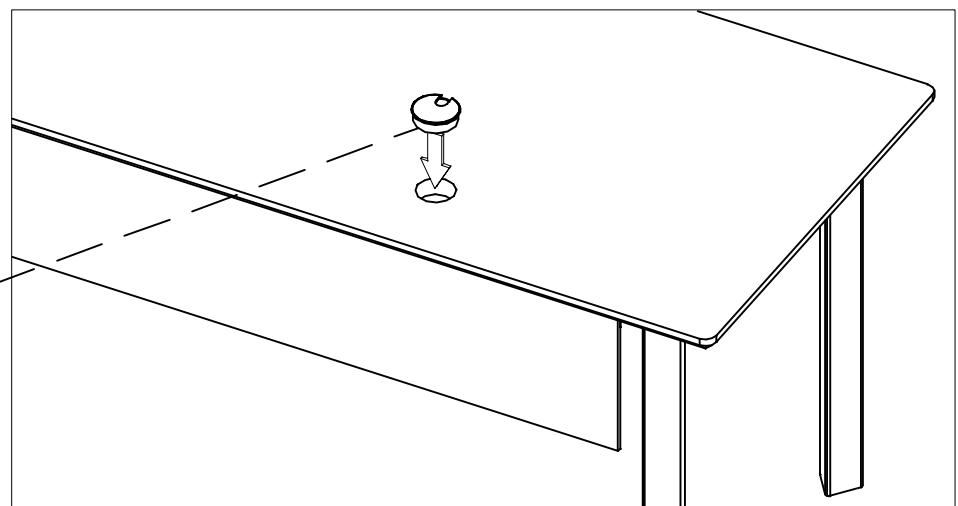

### Step 5

Remove low adhesive  
tape, and insert grommet  
into hole.