
ASSEMBLY


Miro Drop-in Power

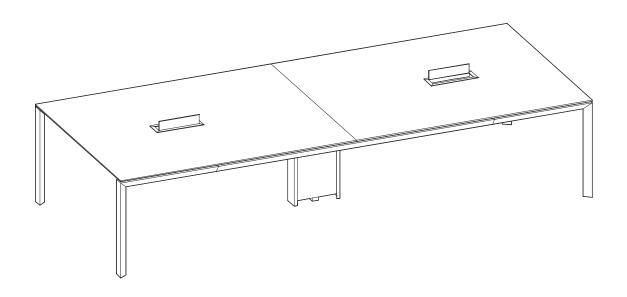






5-3 Dropn-in - MADIN8

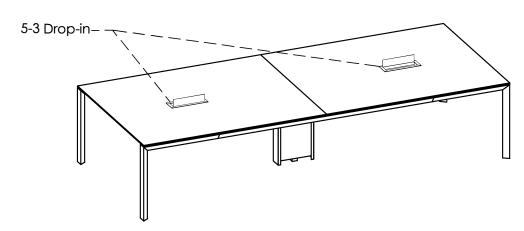

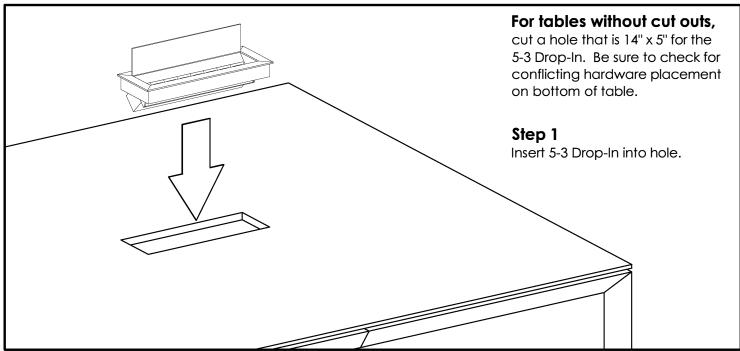


Step 2

Install steel retention clips on Drop-In along hinge side.

Voice and Data

Refer to manufacturer's instructions for installation of voice and data connections.

steel clip- —

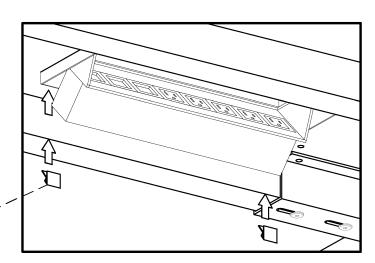


Page 1 of 6 INS31021





5-3 Dropn-in - MADIN8

Step 3

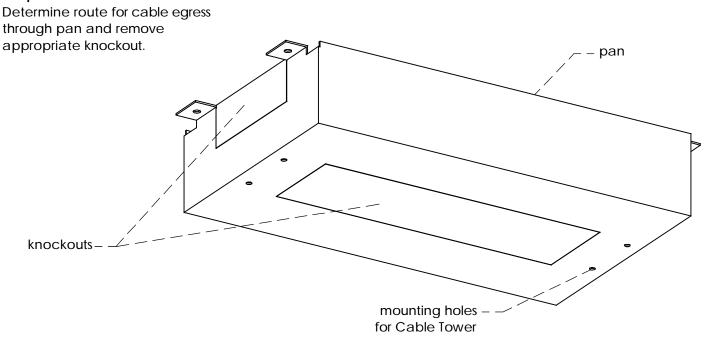

Step 4 Install pan under 5-3 Drop-in using #10 x 3/4" wood screws (FIG-1).

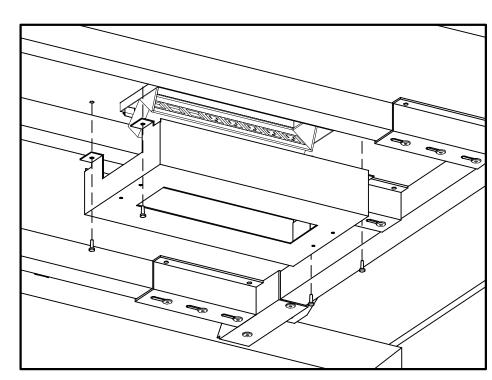




Page 2 of 6 INS31021




5-3 Dropn-in - MADIN8


Step 5 - for plug-in power

Install alligator clips and route cables out of pan from drop-in to Cable Tower. Use #10 x 3/4" wood screw (FIG-1) to attach clips.

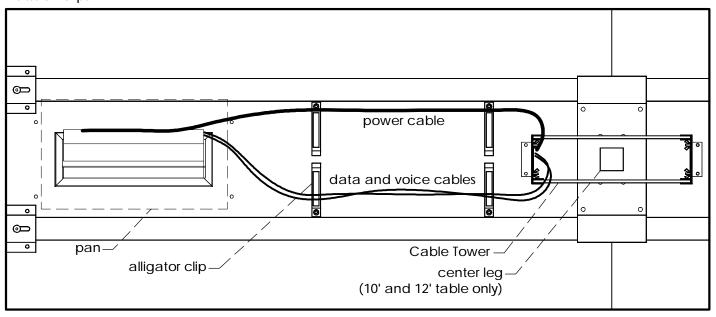

Step 6Route cables through Cable Tower (see Cable Tower instructions).

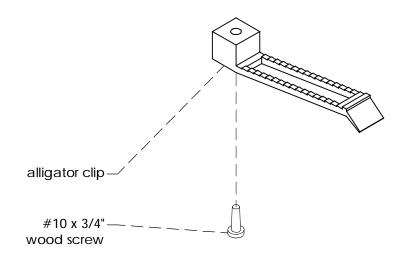




Page 3 of 6 INS31021




5-3 Dropn-in - MADIN8

Step 5 - for hardwire power

Install alligator clips, conduit clips, and H-connector and run cables from drop-in to Cable Tower.
Use #10 x 3/4" wood screw (FIG-1) to attach clips.

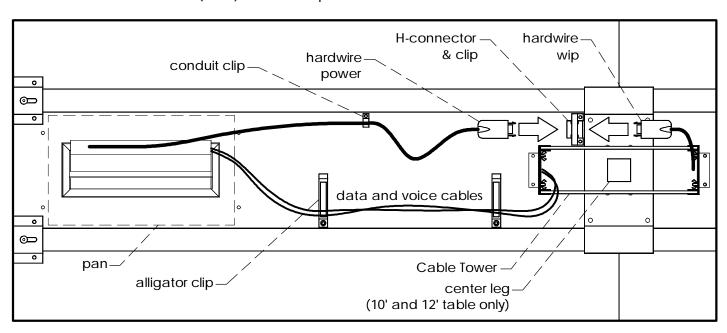

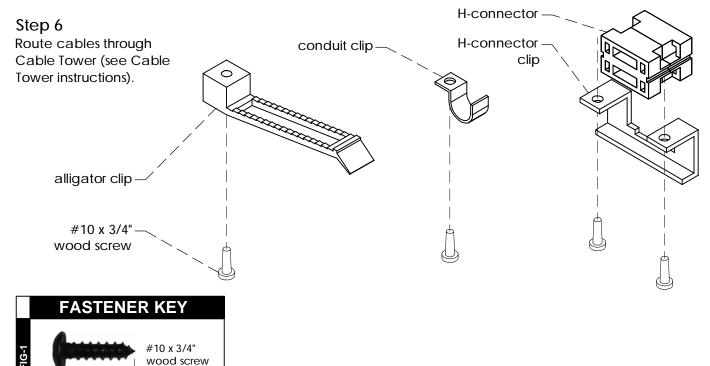


Page 4 of 6 INS31021

3/4"




2-1 Drop-In Power - MADIN3

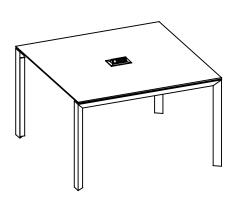


Note
It is recommended to orient the drop-ins in opposing directions for tables with 2 drop-ins.

For tables without cut outs, cut a hole that is 6-1/2" x 4" for the 2-1 Drop-In. Be sure to check for conflicting hardware placement on bottom of table.

Step 1 Insert 2-1 Drop-In into hole.

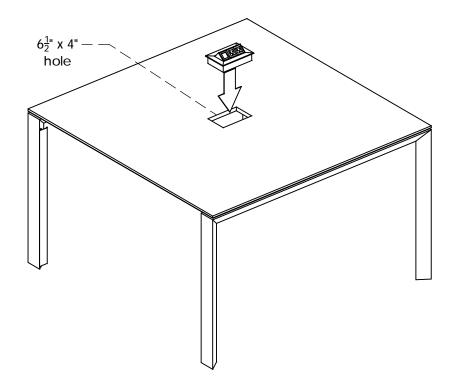


Step 2 Install plastic retention clips and steel retention clips on Drop-In along hinge side.

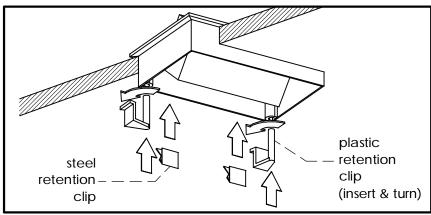


Page 5 of 6 INS31020



2-1 Drop-In Power - MADIN3

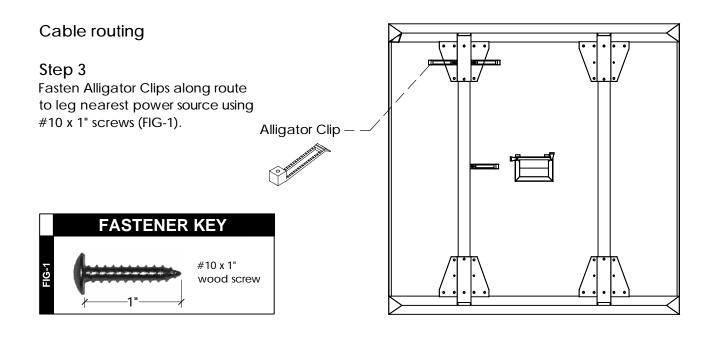

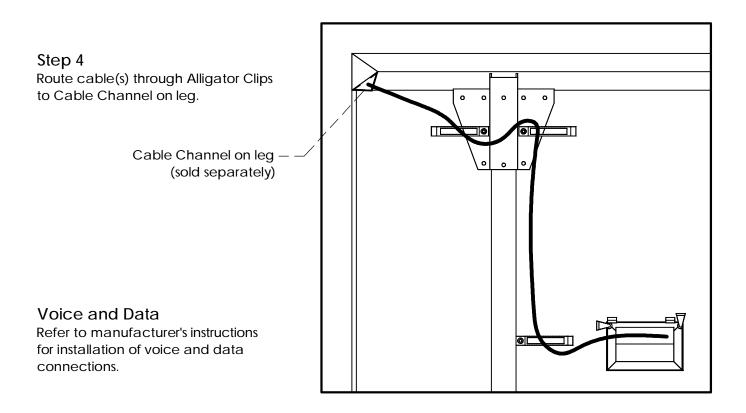

Page 6 of 6 INS31020