


ASSEMBLY

Miro Grommet

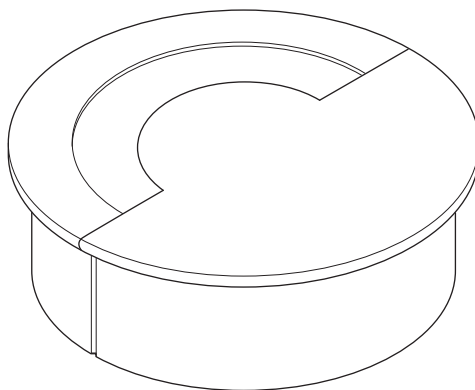


View Digitally




WATSON DESKING

PRODUCT INSTALLATION: Grommet Field Installation


Step 1
Buy grommets.

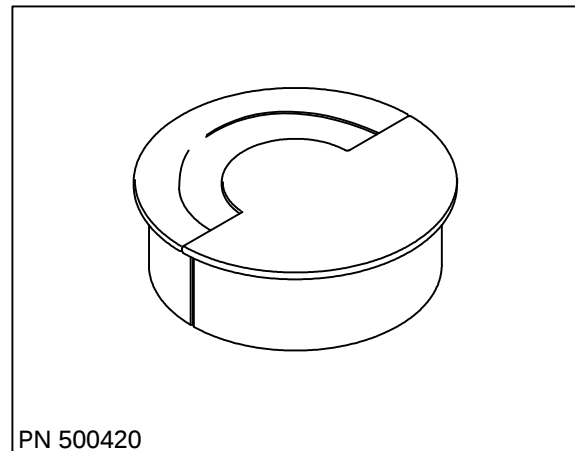

Step 2
Pick a grommet location free of other hardware. Pilot drill location from bottom.

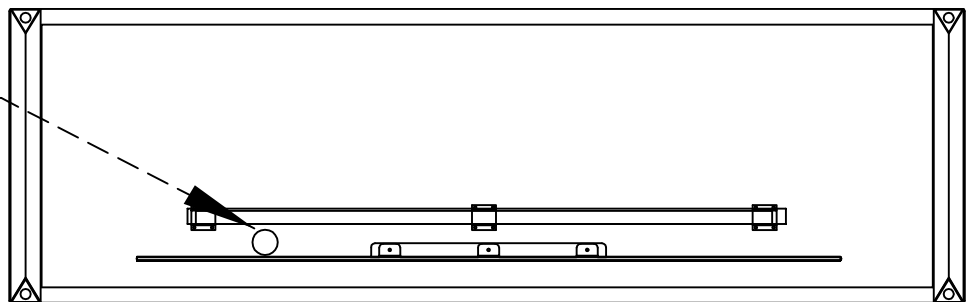

Step 3
Drill grommet hole from the top. Hole size is 2 3/8" [60mm].

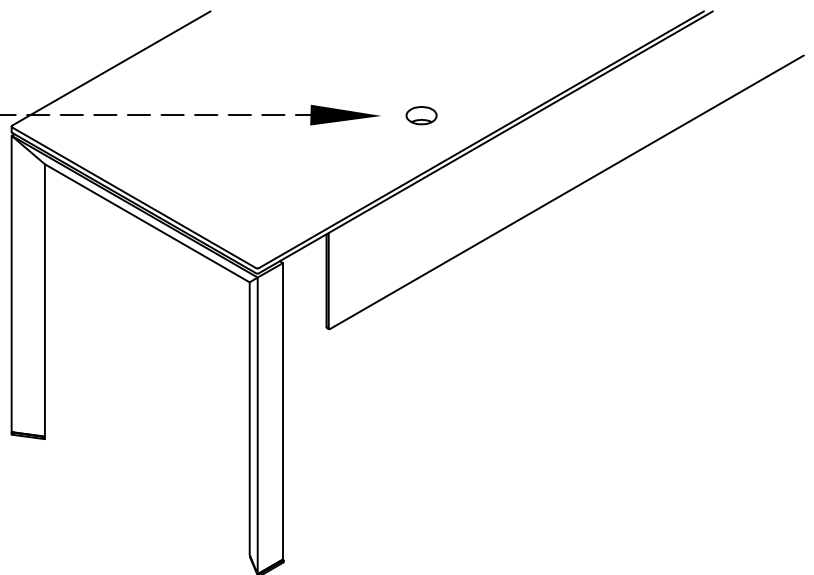

Step 4
Insert grommet into hole.