




# ASSEMBLY

## Tonic Acrylic Side Screen

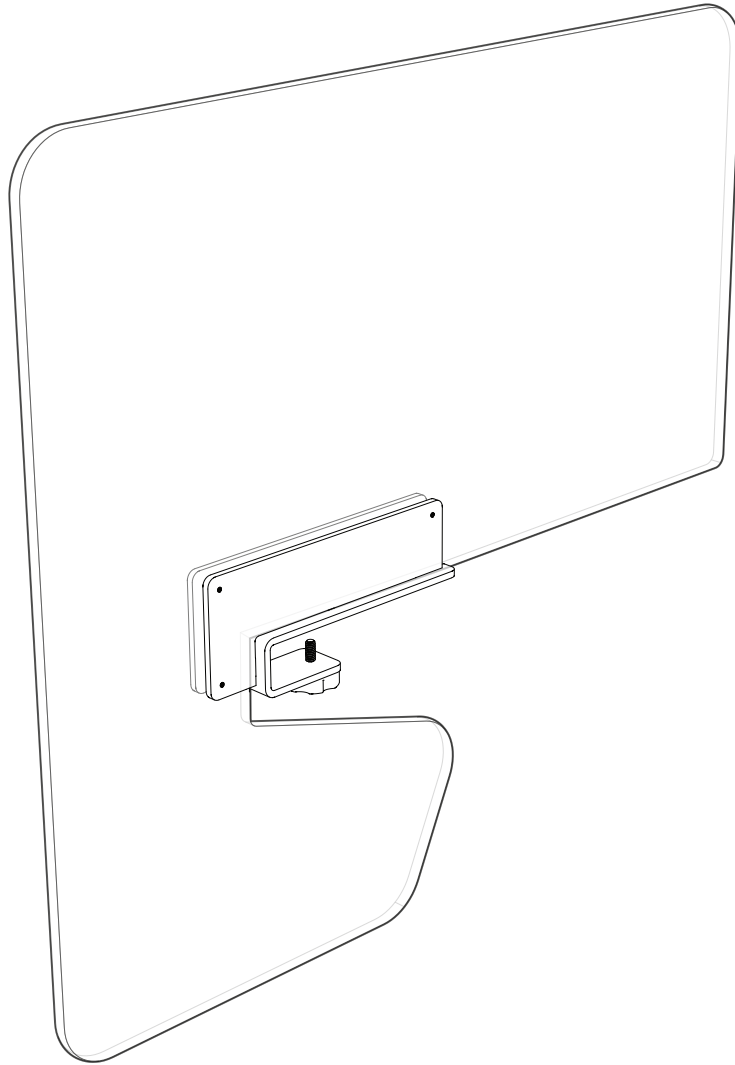


View Digitally

# Tonic Acrylic Side Screen Basic Components

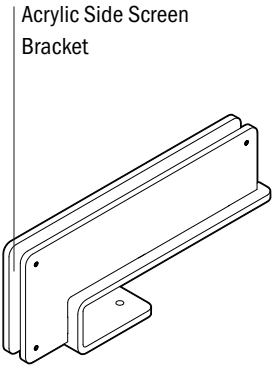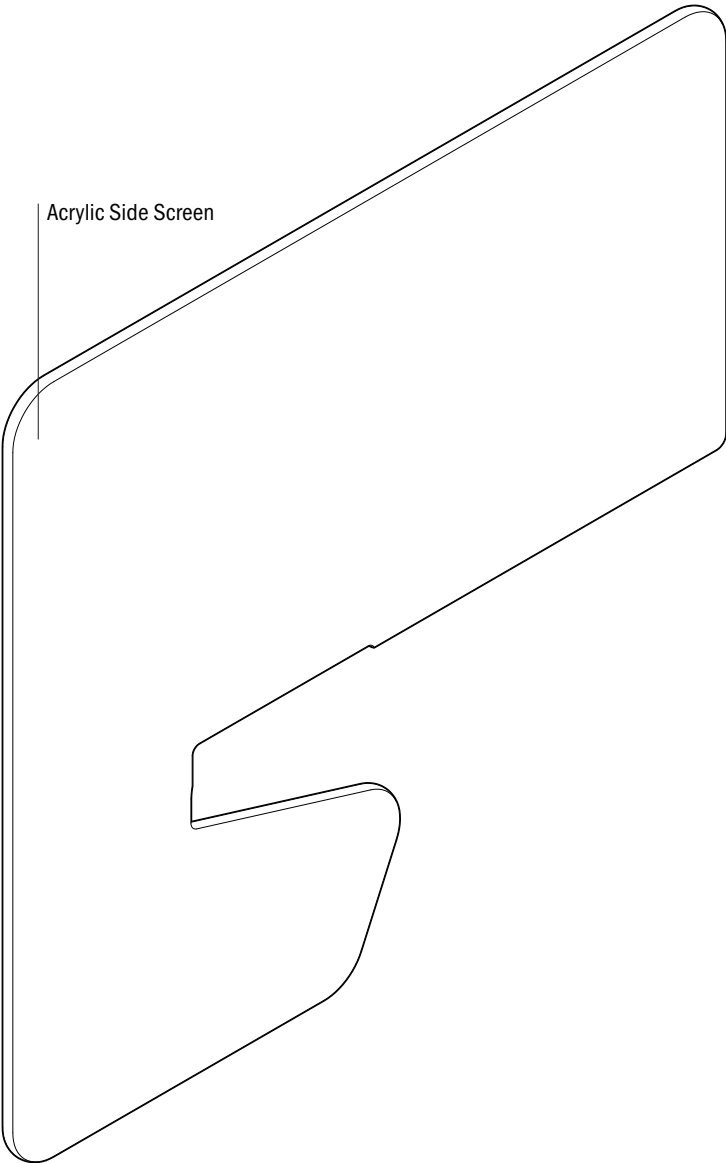

# Hardware

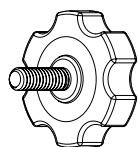


Thumbscrew (0001011)



M4-0.7 X 5mm  
Flat Tip Set Screw  
(0001612)

# Tools

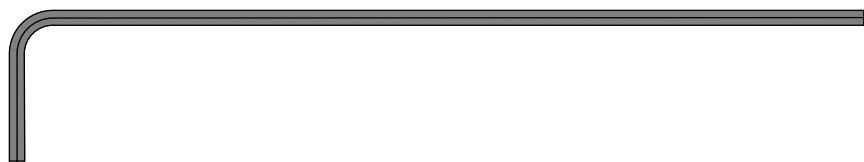


2mm Allen Wrench





1.

### Attach HW to Bracket

Attach the thumbscrew (0001011) to the bottom of the bracket. Slide the bracket assembly onto the worksurface in the desired position and tighten the thumbscrew.

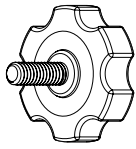

Thumbscrew (0001011)

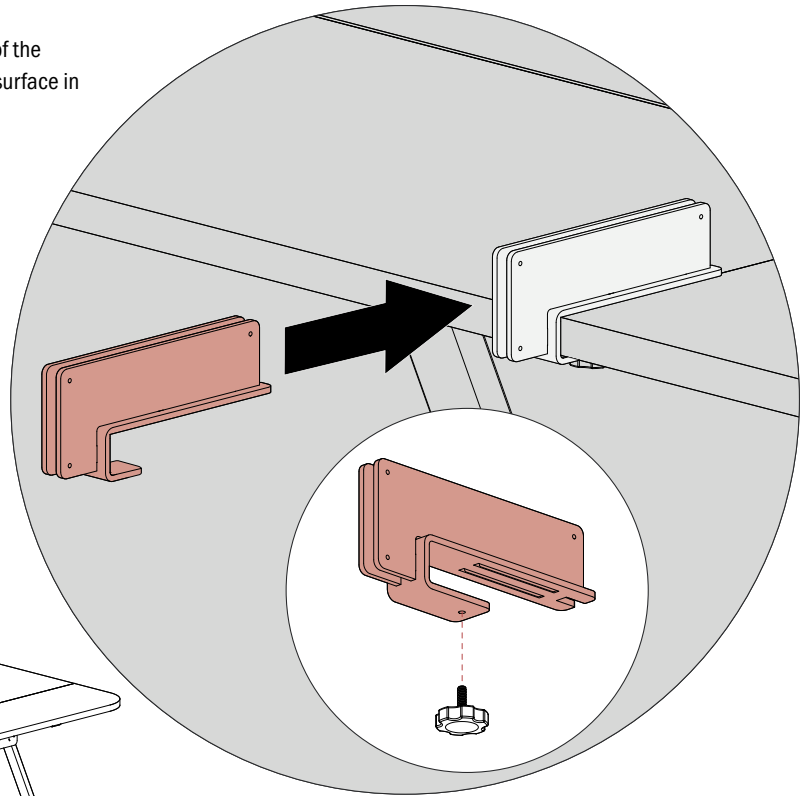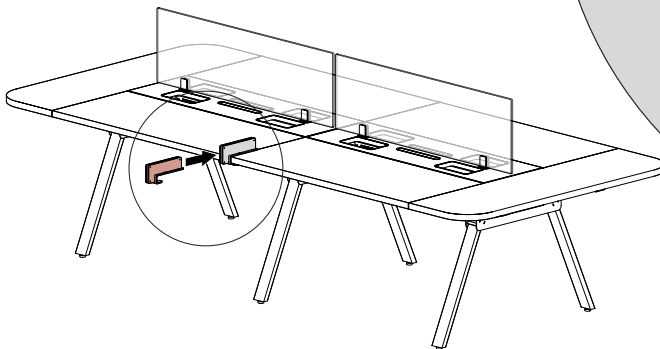

2.

### Secure Acrylic in Bracket

Slide the acrylic screen into the bracket. Thread in 3 set screws (0001612) and tighten until screen is secure.



M4-0.7 X 5mm Flat Tip  
Set Screw (0001612)

