


ASSEMBLY

Tonic Bench Vertebrae

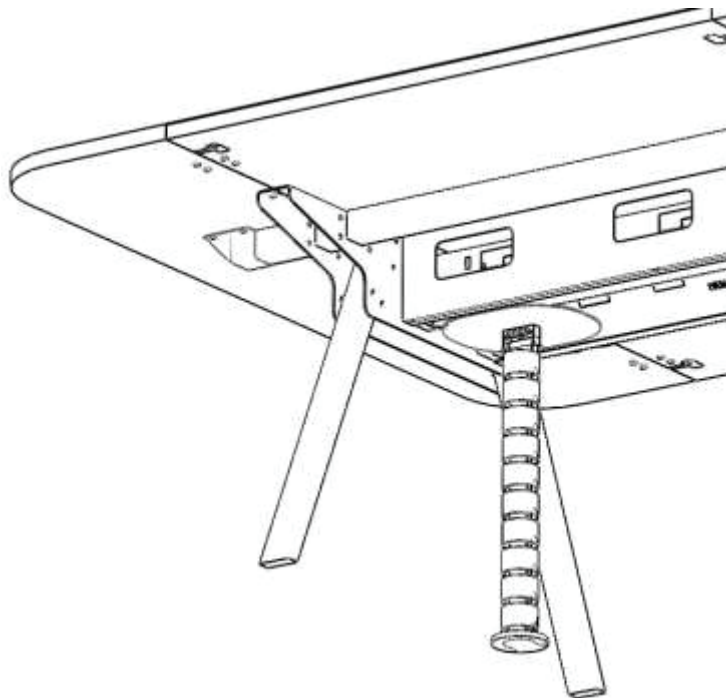

View Digitally

Tonic Vertical Wire Manager Assembly Instructions

Tools Required

Cordless drill, magnetic insert-bit holder, 8" or longer driver extension, #2 insert or Pozidriv bit

ITEM NO.	COMPONENT	QTY
A	VERTEBRAE WIRE MANAGER	1
B	CABLE SLAT	1
C	6-32 X 1/2" PAN HEAD MACHINE SCREW	1
D	6-32 HEX NUT	1

Step 1 – Join cable slat and wire manager

Insert the screw through the hole in the bracket at the end of the vertebrae wire manager. Place the cable slat over the protruding, threaded shank of the screw. Tighten the nut onto the screw. (Figure 1)

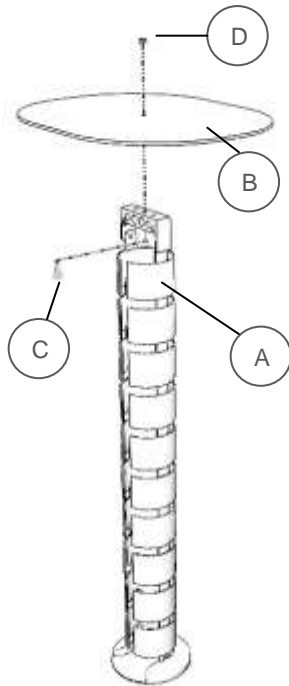


Figure 1

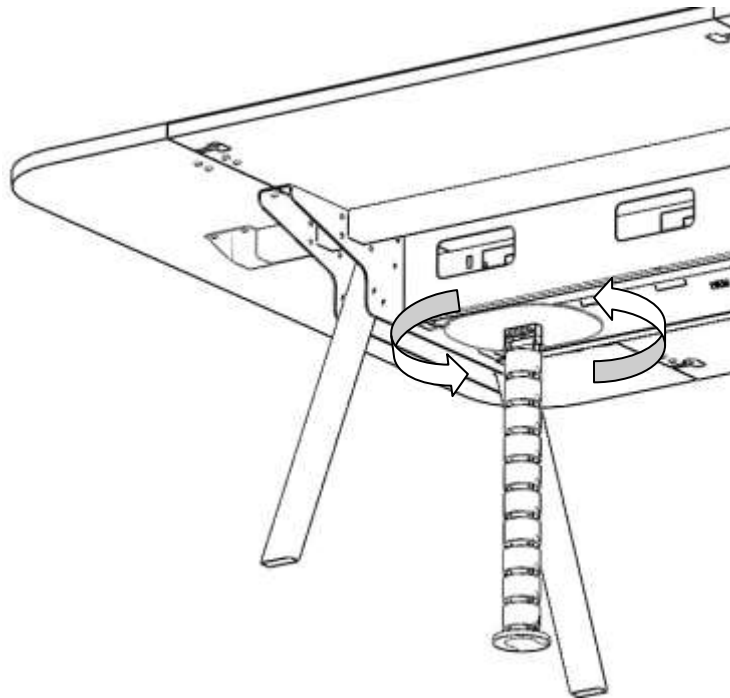


Figure 2

Step 2 – Install wire manager on Bench

Place the wire manager / cable slat directly below the center trough of the bench at the desired location along the table's length. Raise the cable slat so that it is between the sides of the trough. Turn the cable slat one quarter turn until the edges of the slat are captured between the bottom, horizontal flanges of the trough and the raceway.

Remove vertebrae segments as required based on cord length.

Operating, maintenance, and installation instructions are available at <https://watsonfg.box.com/installation>