
# **ASSEMBLY**

Miro Wall Mount Storage



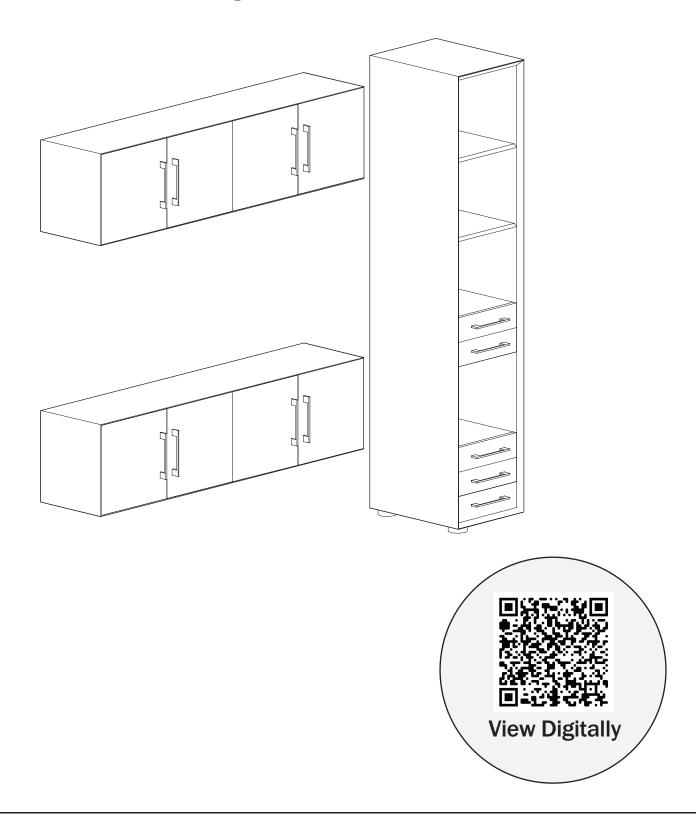


## PRODUCT INSTALLATION:

Wall Mounted Cabinets / Overheads MS60XXXXX

### **Mounting Options**

- Wall mounted cabinets can be mounted at any height.
- When using cabinets as overheads, consult with the project architect, designer, or the customer for mounting height.
- Neighboring cabinets can also be used as reference height.
- When mounting cabinets low, reference neighboring table heights. Watson Tables are 29 1/2" tall before leveling.

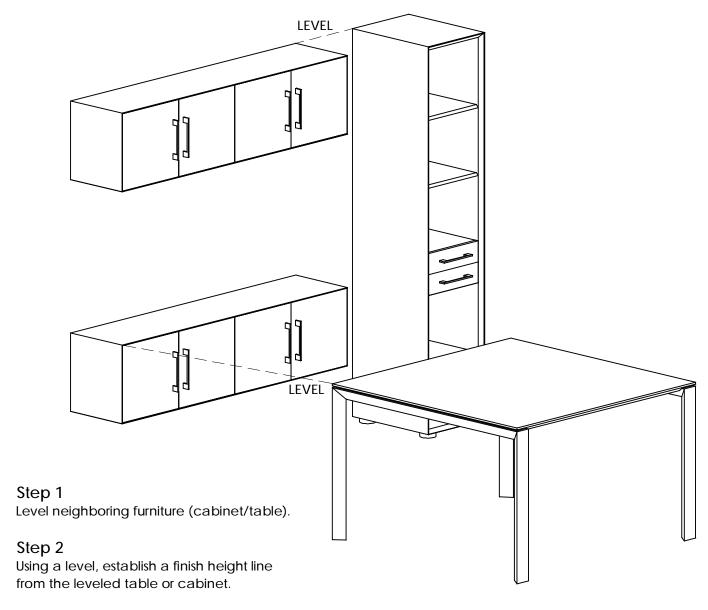

## Step 3

Mount aluminum cleat on wall and hang cabinet (see Page 2).

NOTE: Low mounted cabinets are not intended for sitting.

Page 1 of 2 INS50060




## PRODUCT INSTALLATION:

Wall Mounted Cabinets / Overheads MS60XXXXX

### Installation onto Wall

### Step 1

Wall hung units are pre-assembled. Aluminum cleat is mounted to the walls studs directly whenever possible or with "molly bolts" when appropriate. Wall fasteners are not included in hardware kit.

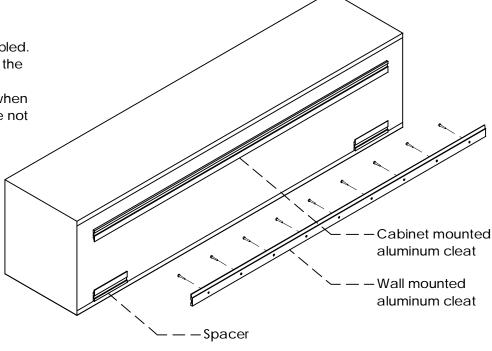

#### Step 2 - - -


Attach aluminum cleat to the wall.

Level as required (see Page 1).

The distance from the top of the cabinet to the top of the wall cleat is 3 7/8" (5 5/8" to the bottom of the wall cleat).

## Step 3

After securing cleat to wall with appropriate hardware, carefully lower cabinet onto the wall cleat.

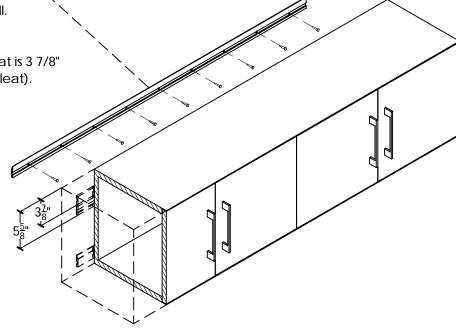

Page 2 of 2 INS50060